


KD3PR/FL






KammBar

Instructions

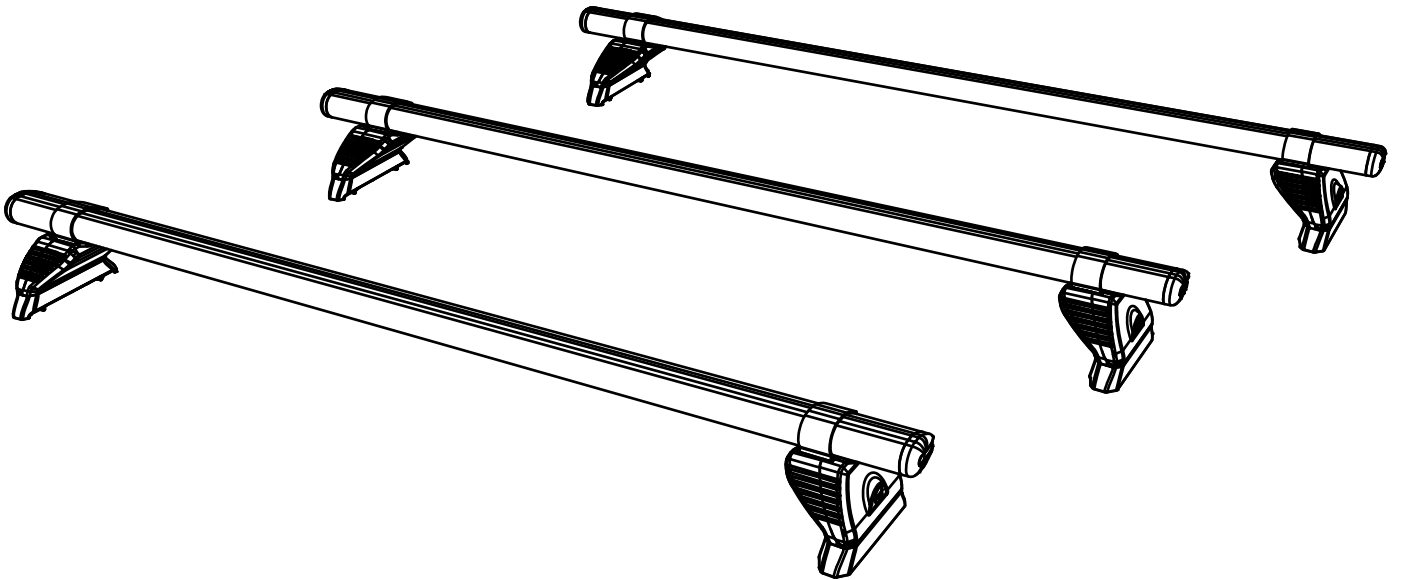


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

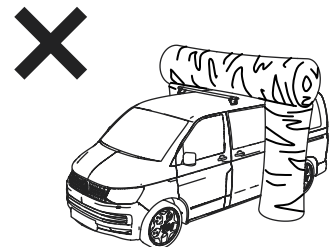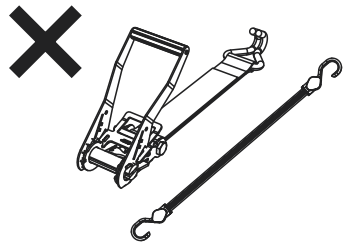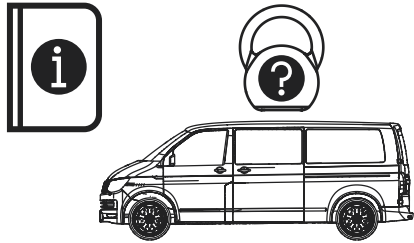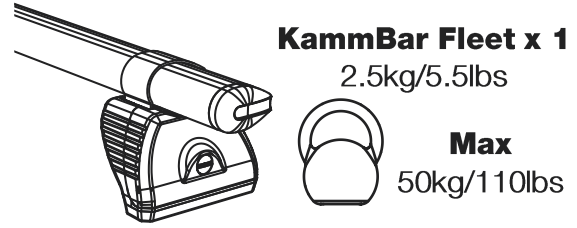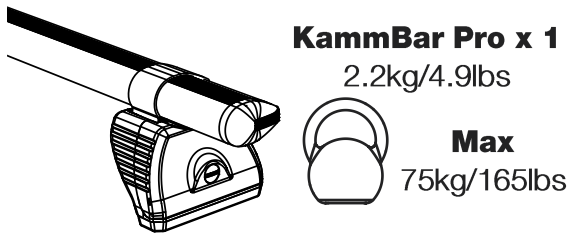


KammBar Pro

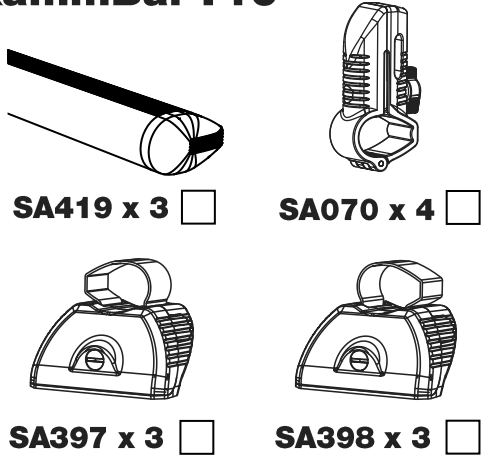


KammBar Fleet

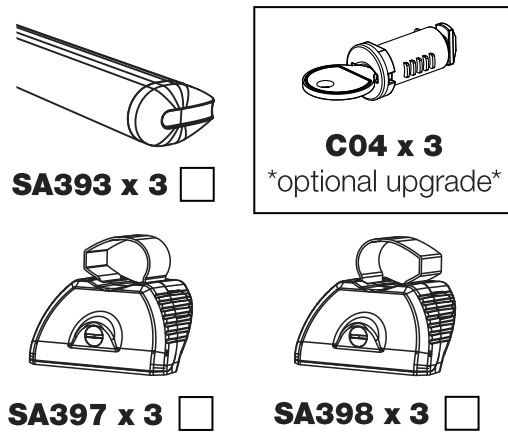


Fitting Kit

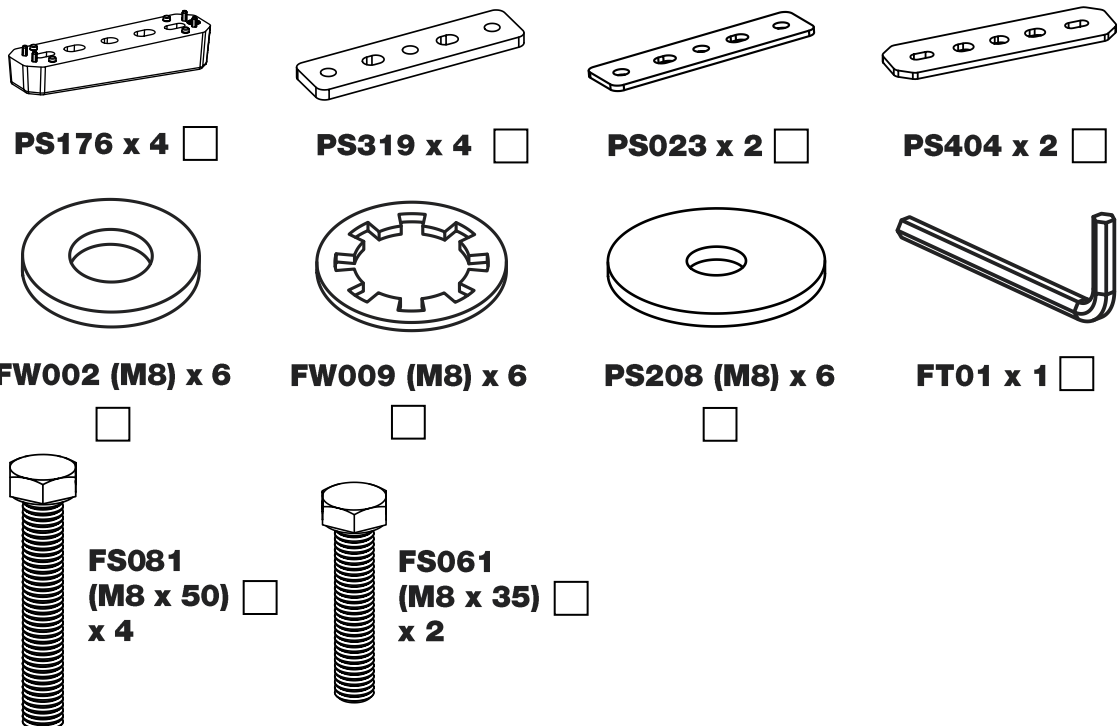


1.

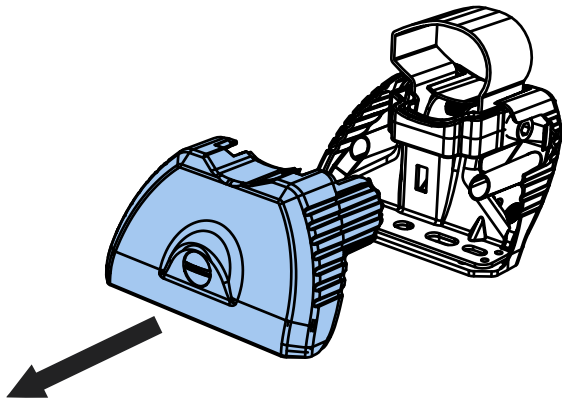

2.

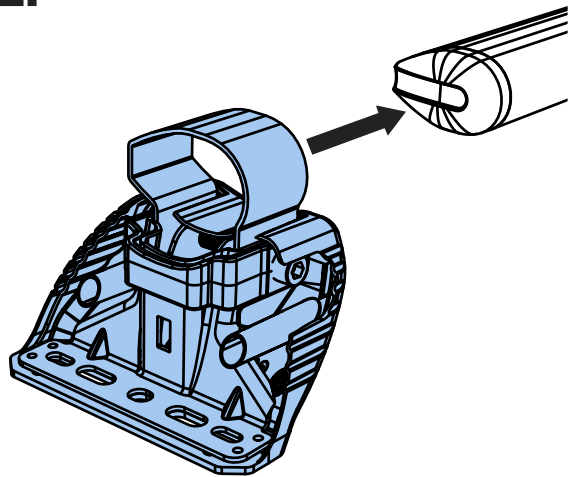


3.




SA397

PS176




SA397




SA397

PS176

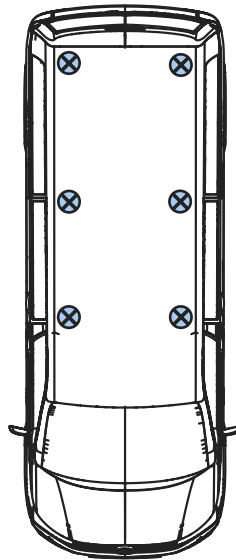


SA398




PS176



SA398




SA398



PS176




4.

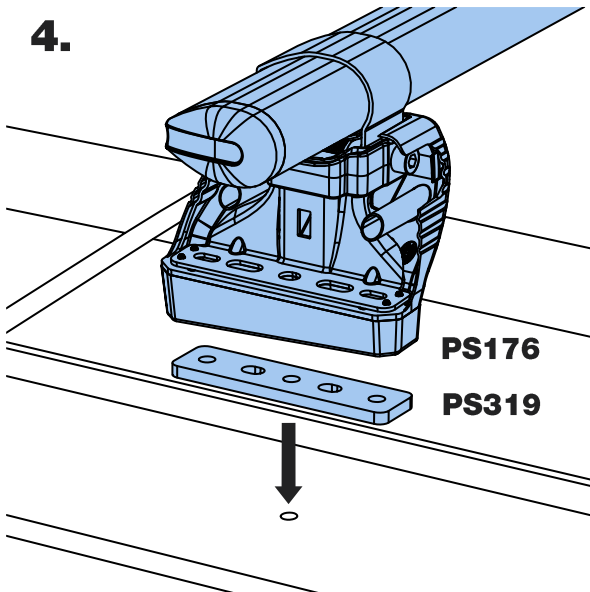

PS176

PS319


5.

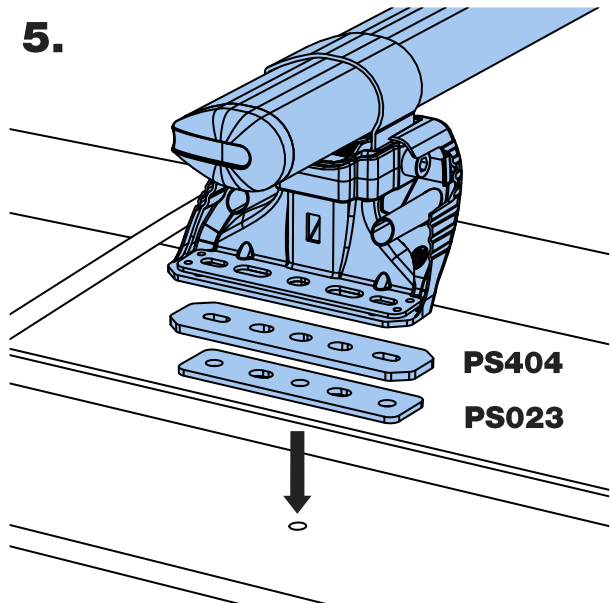


PS404

PS023


6.

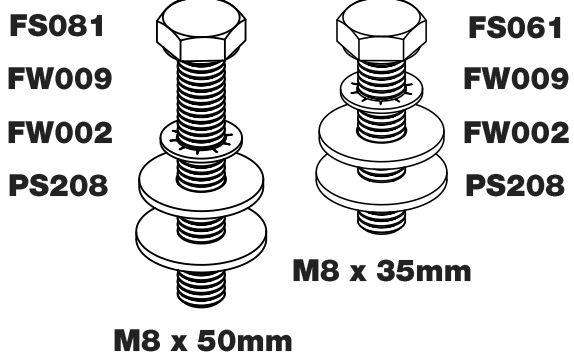


7.

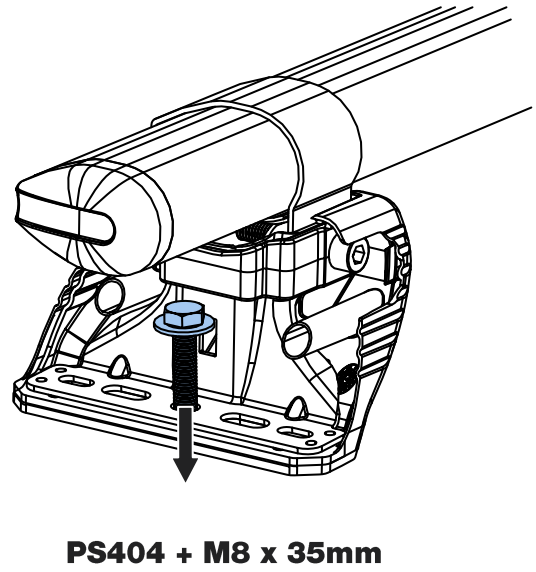


8.

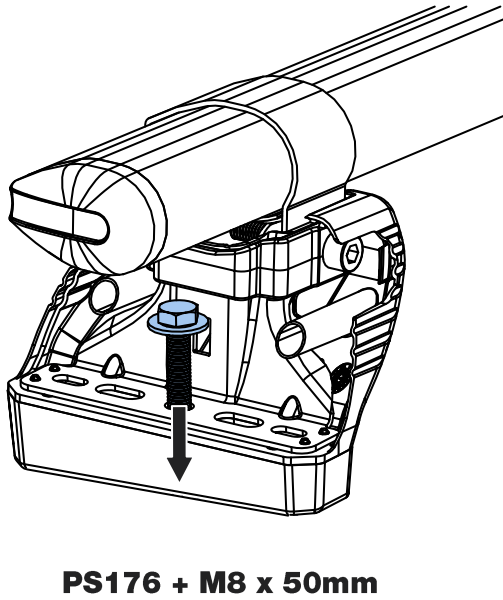


9.

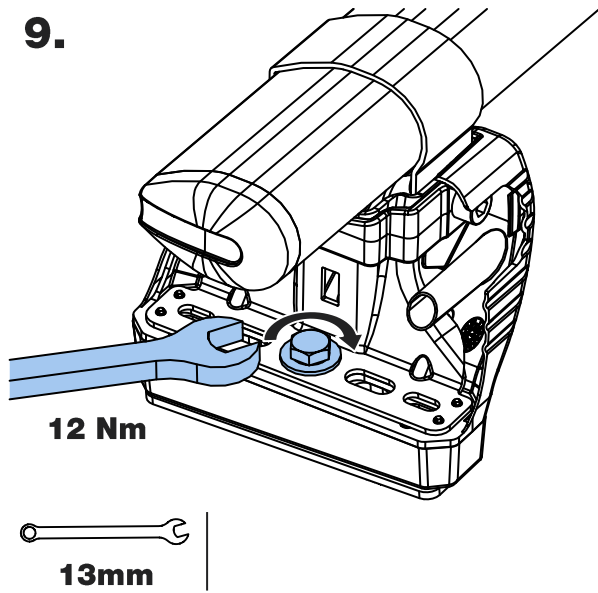


10.

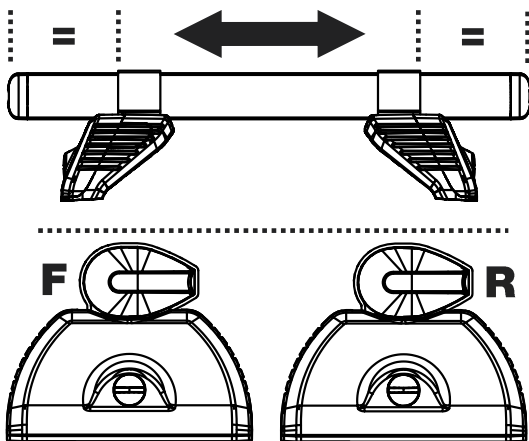

11.

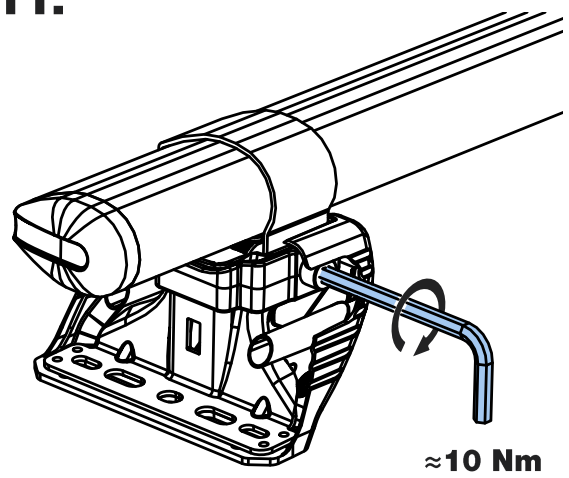

12.

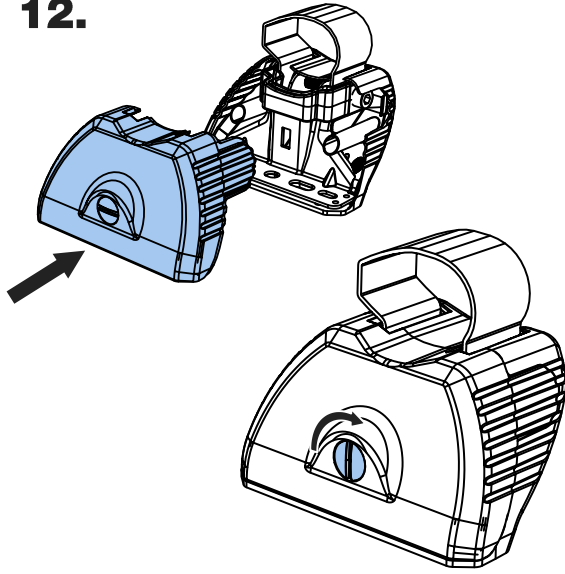

13.

