







MV2PR/FL KammBar

Instructions


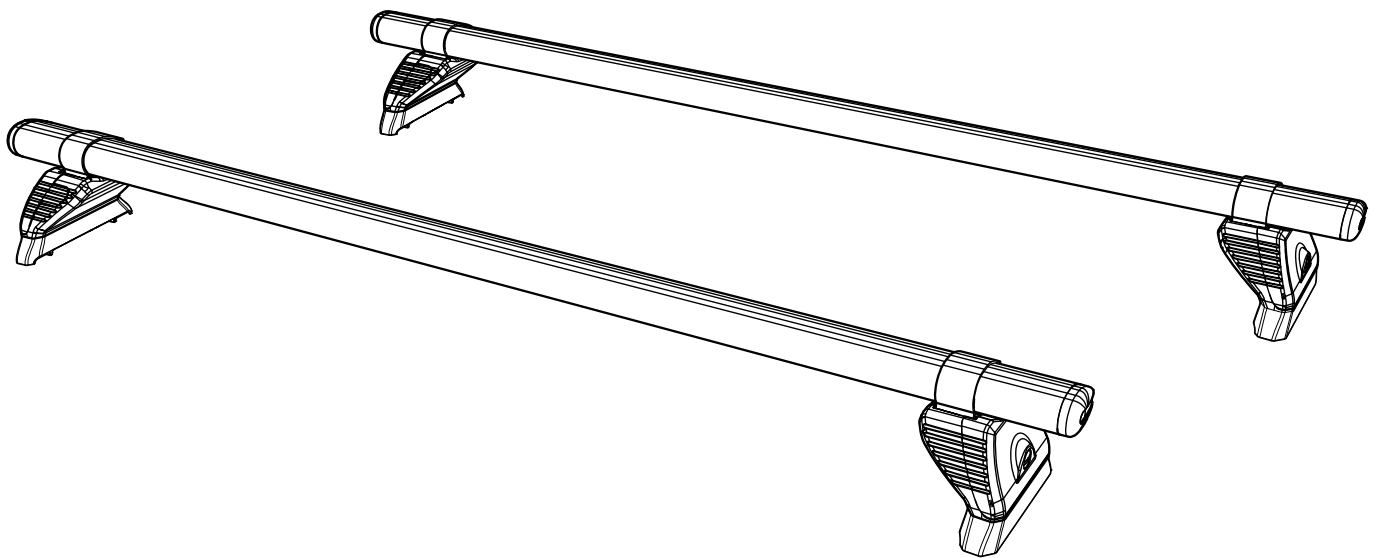


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

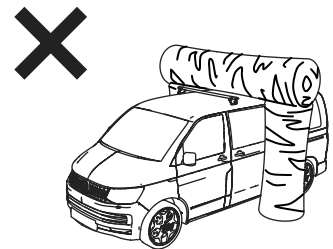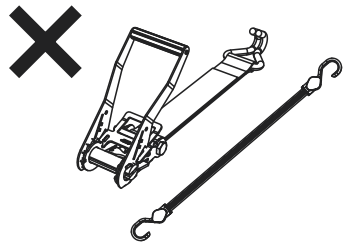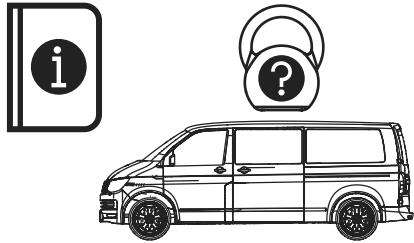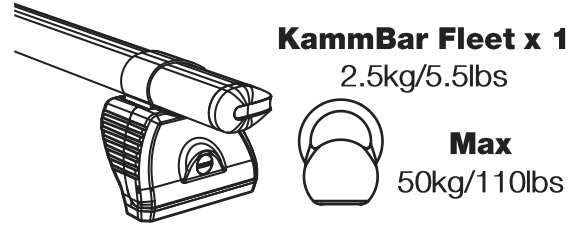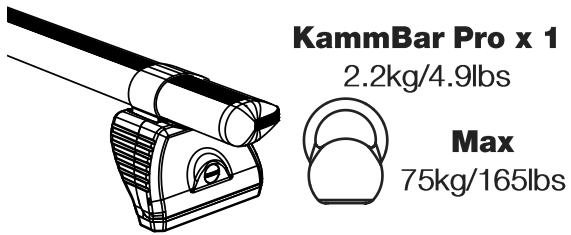




KammBar Pro

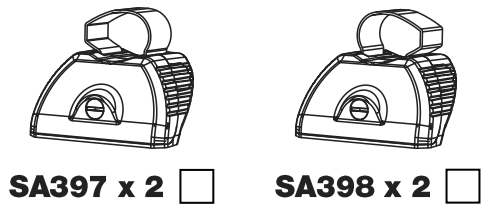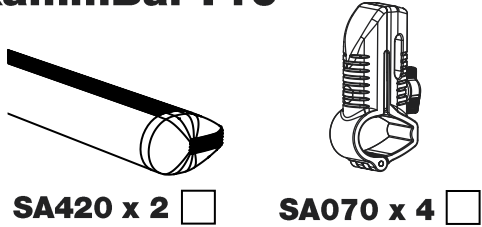


KammBar Fleet

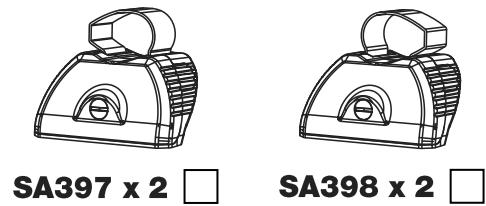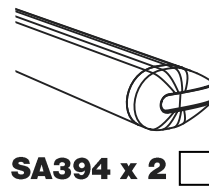


Fitting Kit

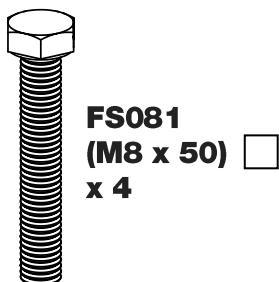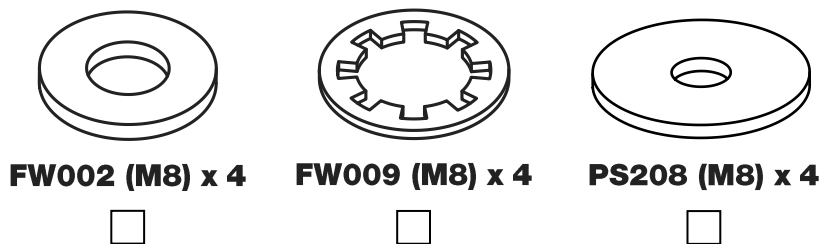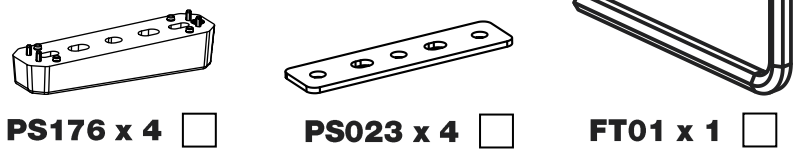


1.

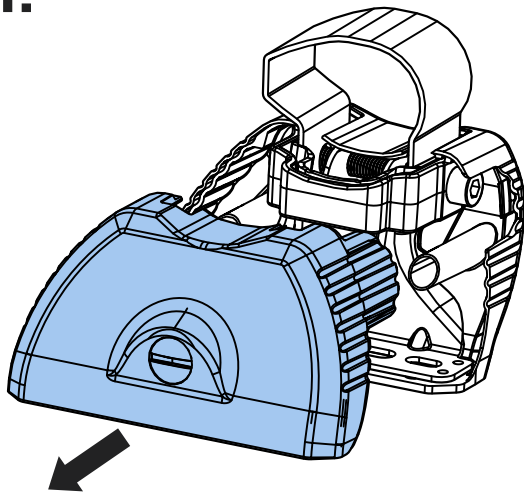


2.

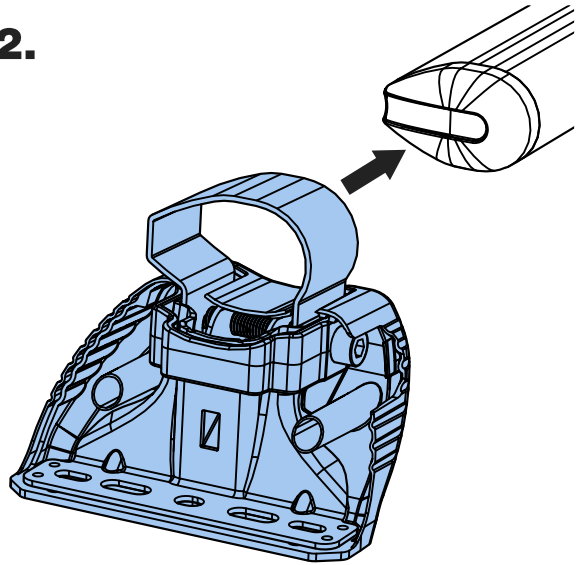



3.



SA397
PS176

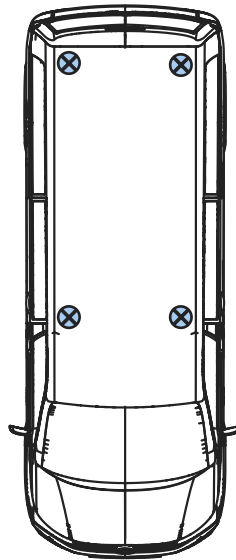


SA398
PS176




SA397
PS176

SA398
PS176



4.

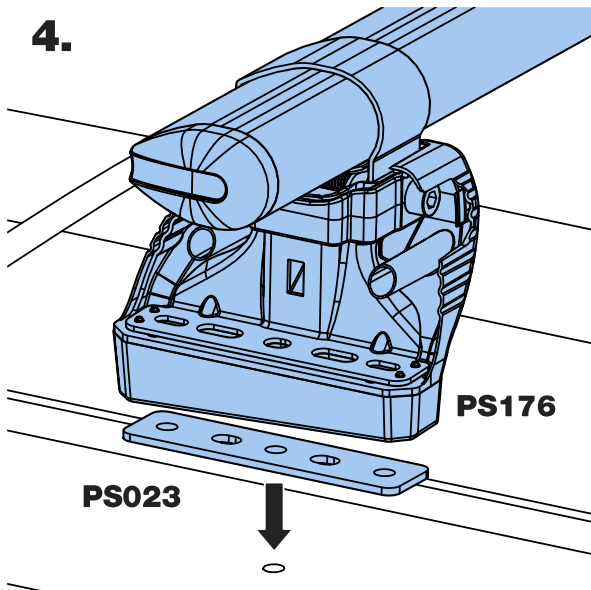

5.

