

# FITTING KIT CONTENTS FK899 (1:1)






FS066 (M8) x 4




FB006 (M8) x 4




FN006 (M8) x 4




FW021 (M8) x 8

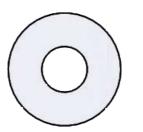

FW002 (M8) x 4

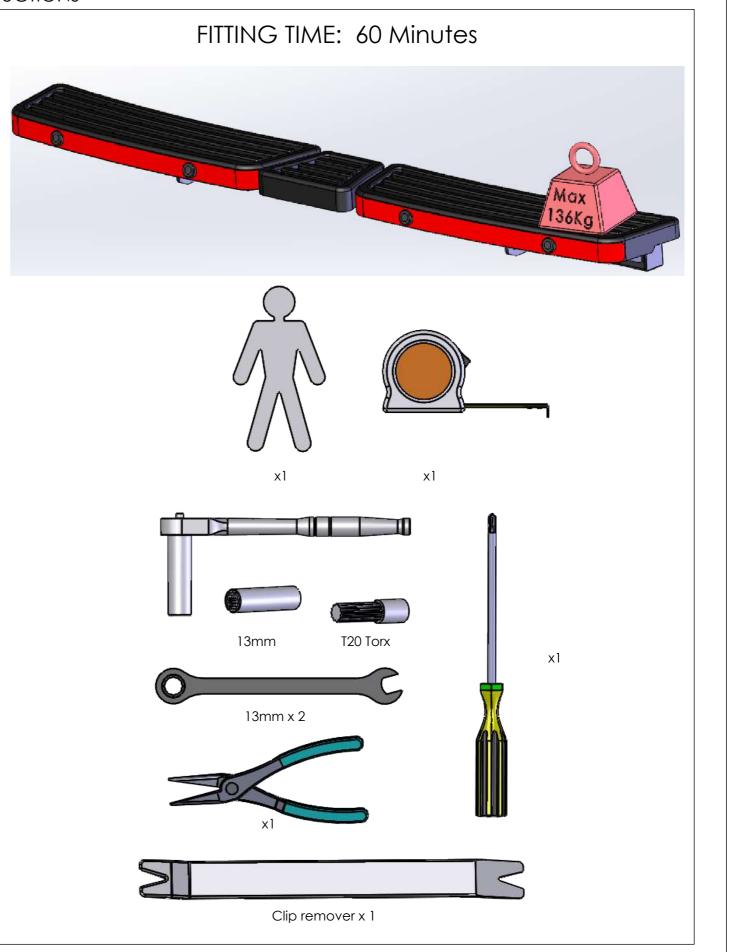





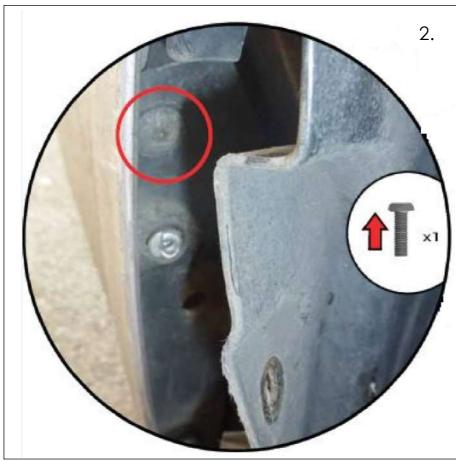





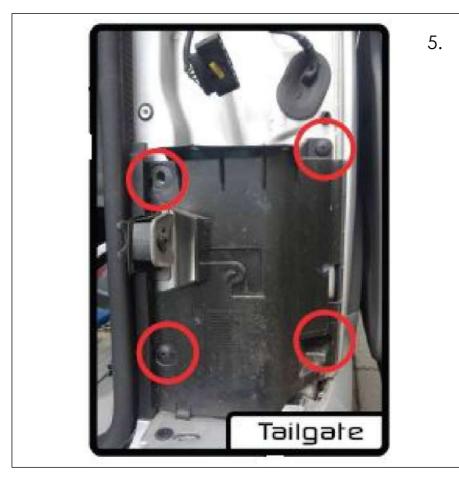

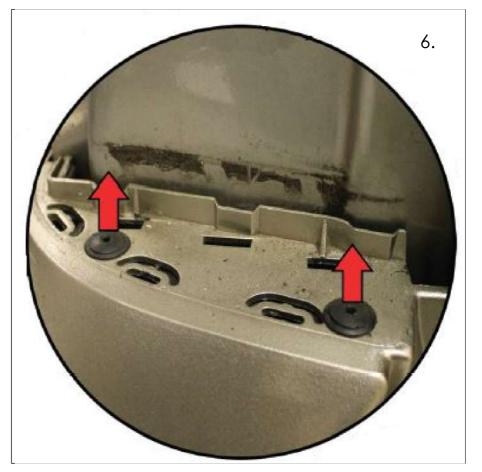

7.





9.




10.









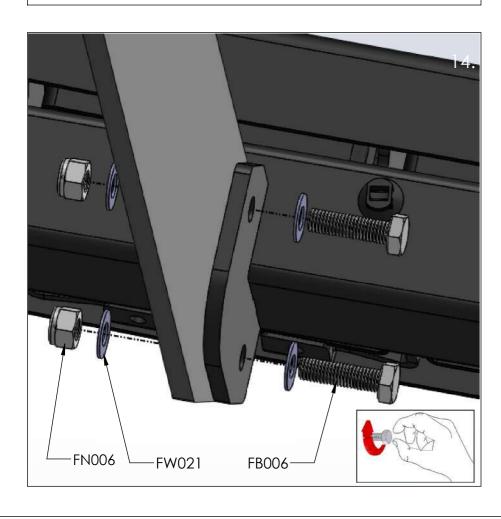












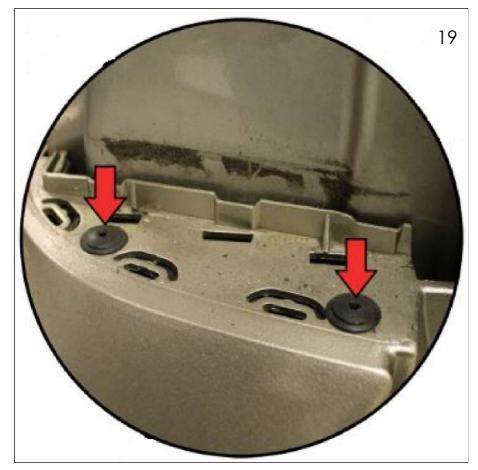


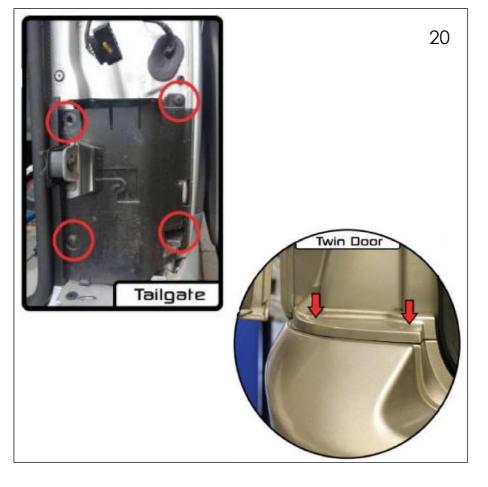


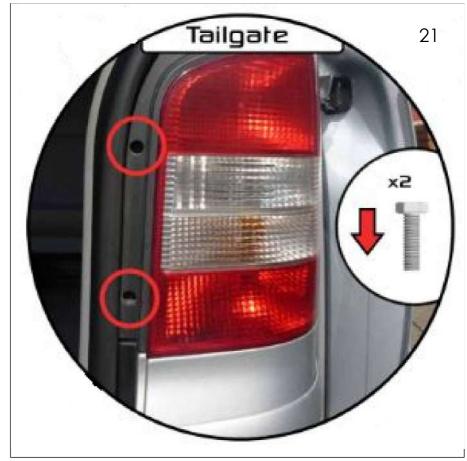








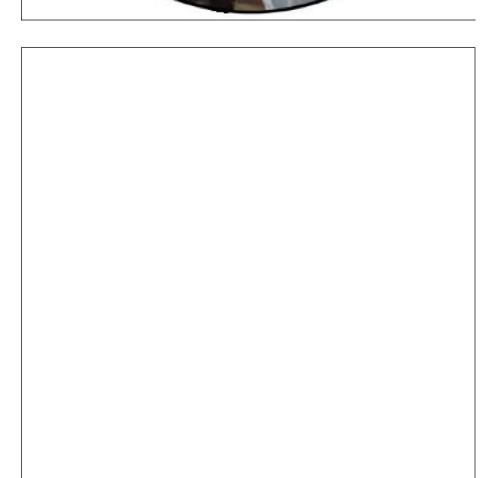


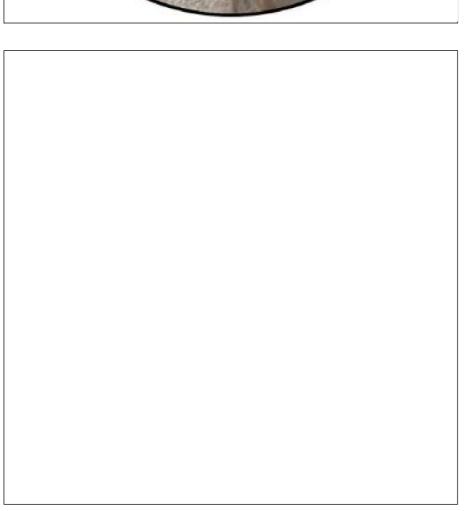

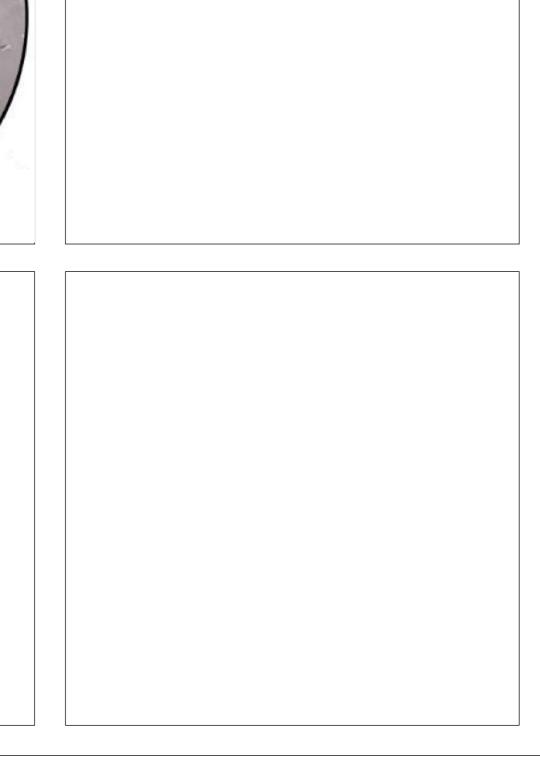

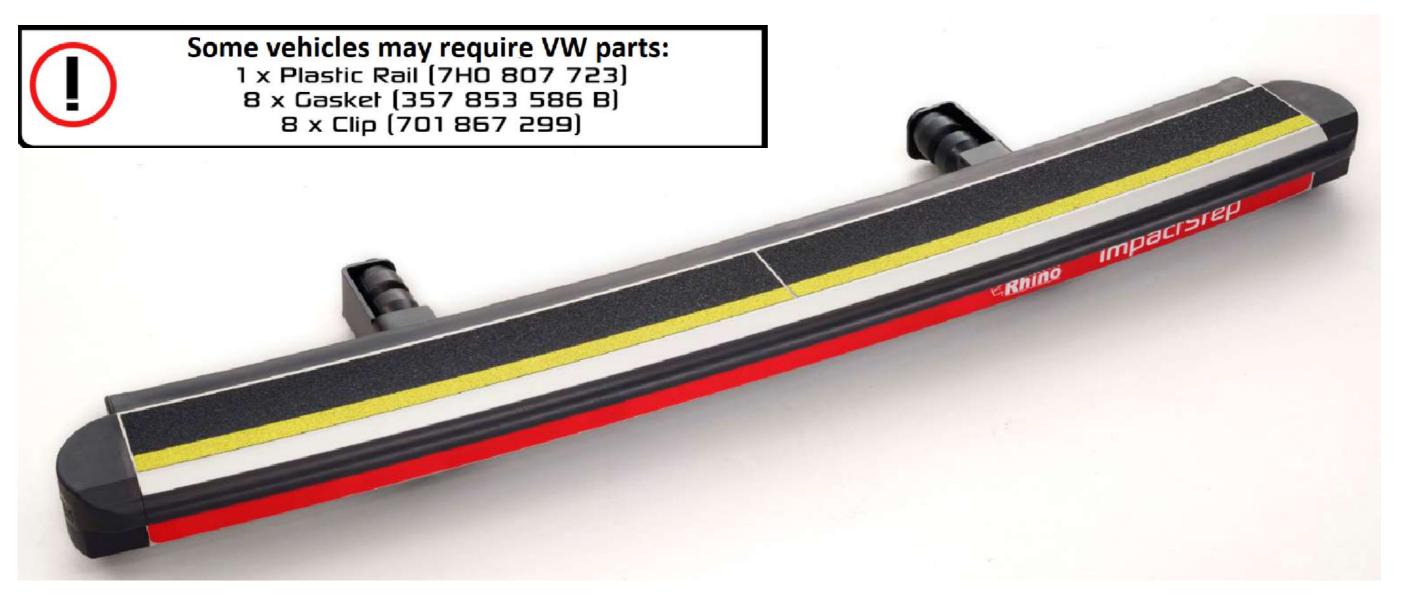

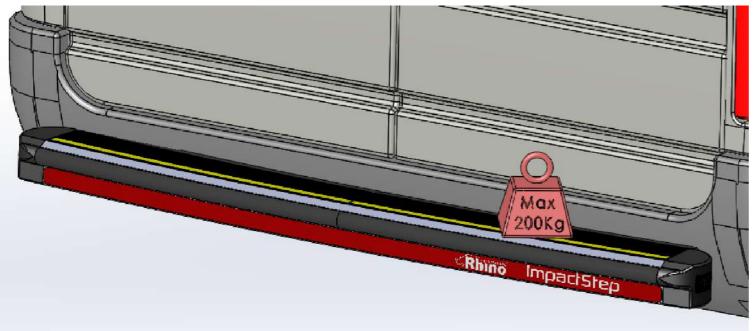

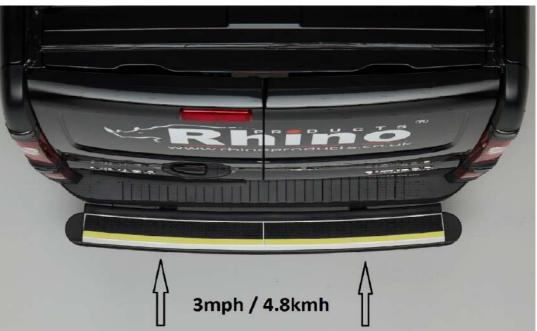








FS066 (M8) x 4





FB006 (M8) x 4




FW021 (M8) x	SAFESTEP	8
	IMPACT STEP	4



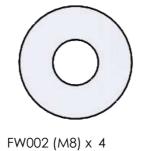

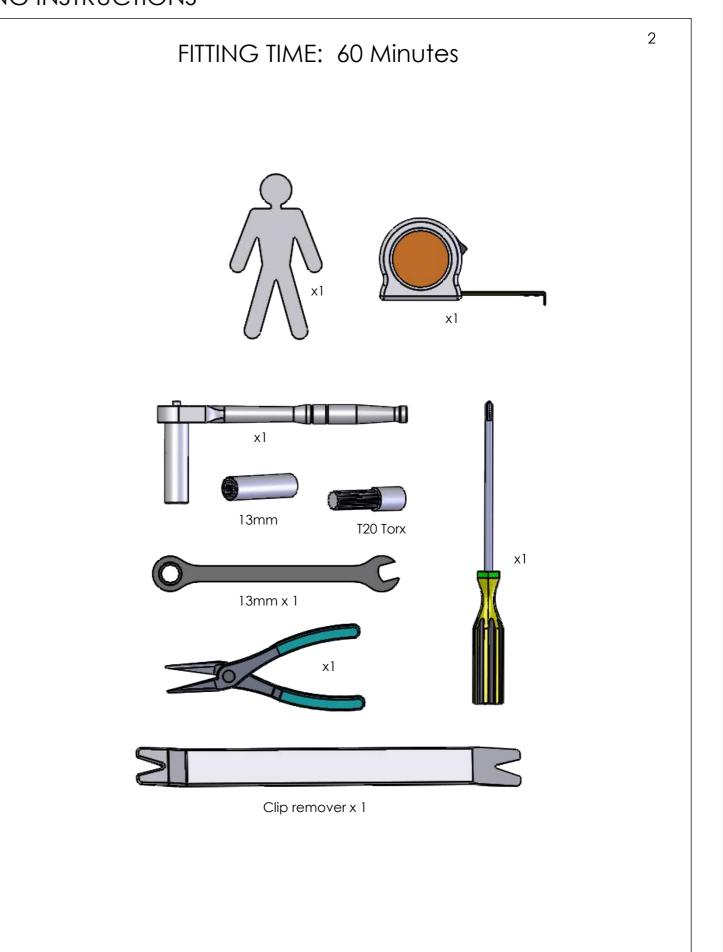




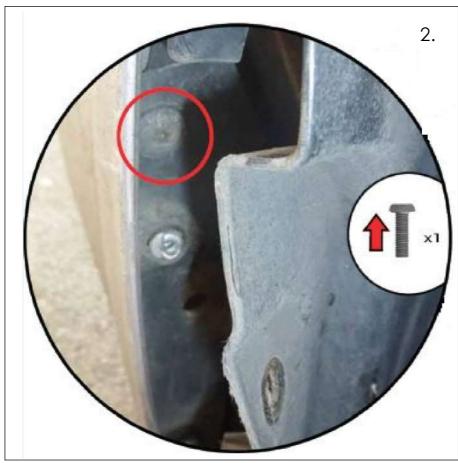





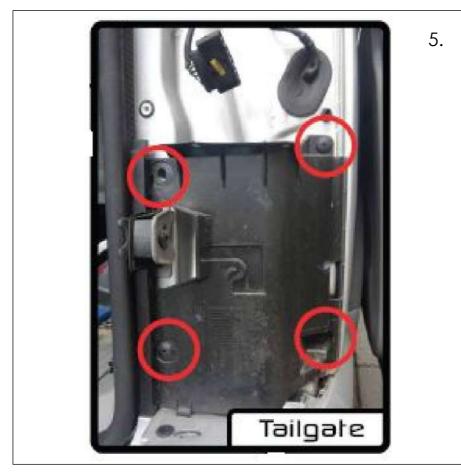



7.







