

FITTING INSTRUCTIONS





FW021 (M8) x8



FW020 (M8) x 4



FW003 (M10) x4




FB006 (M8 x 30) x 4




FN006 (M8 x 30) x 4





FS097 (M10 \times 50) \times 4

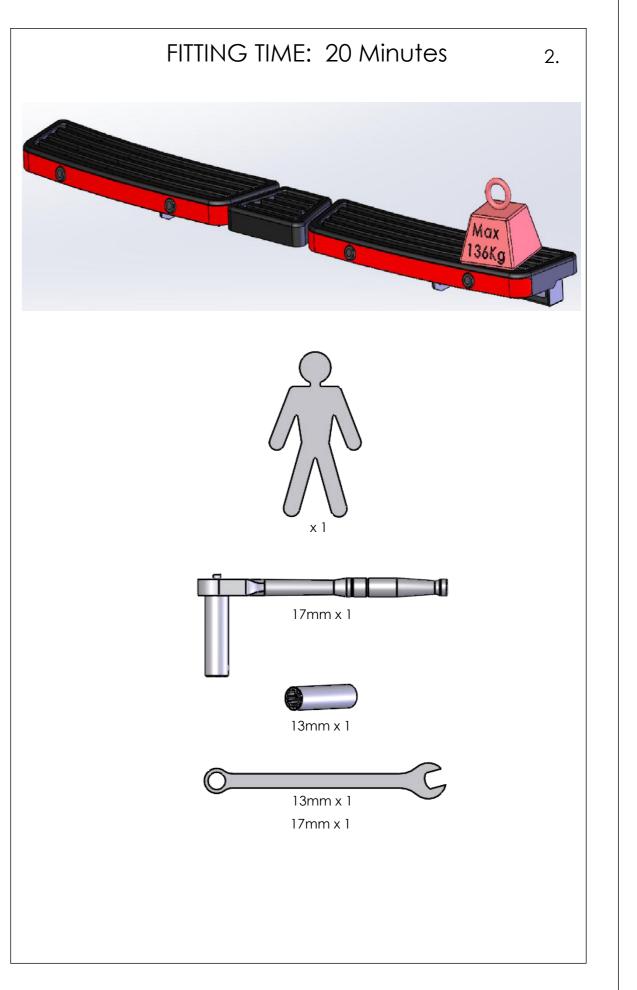



FITTING INSTRUCTIONS

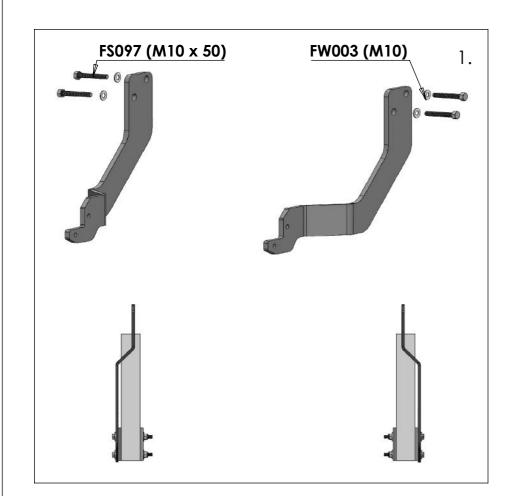


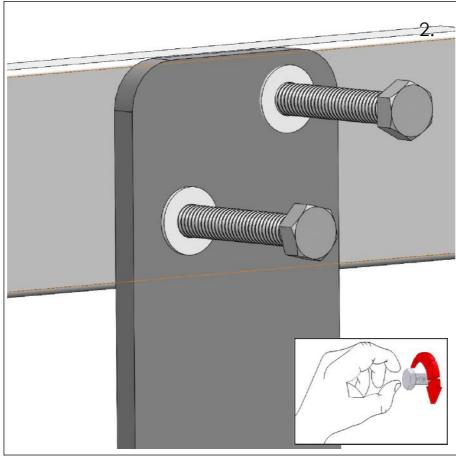


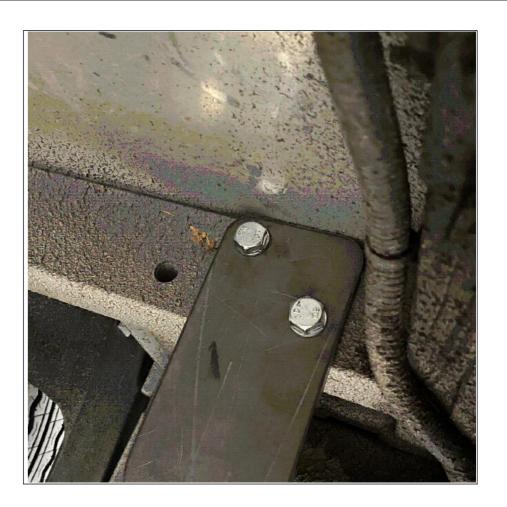

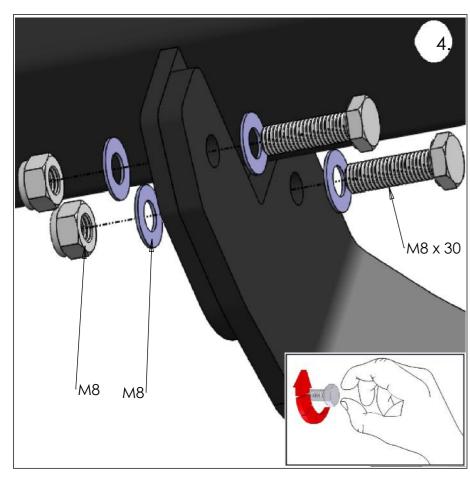


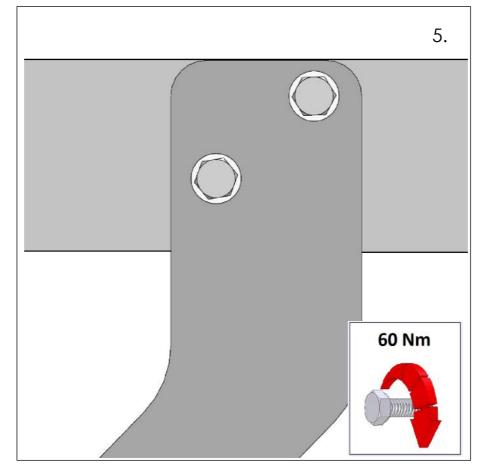


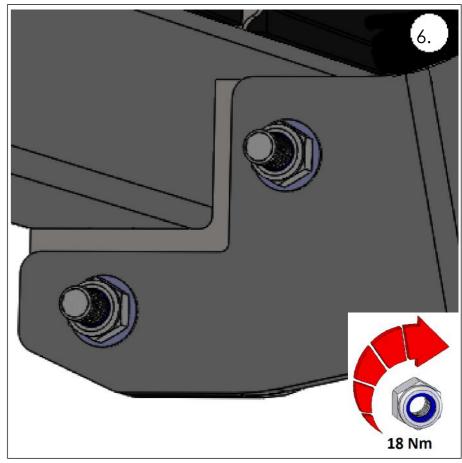

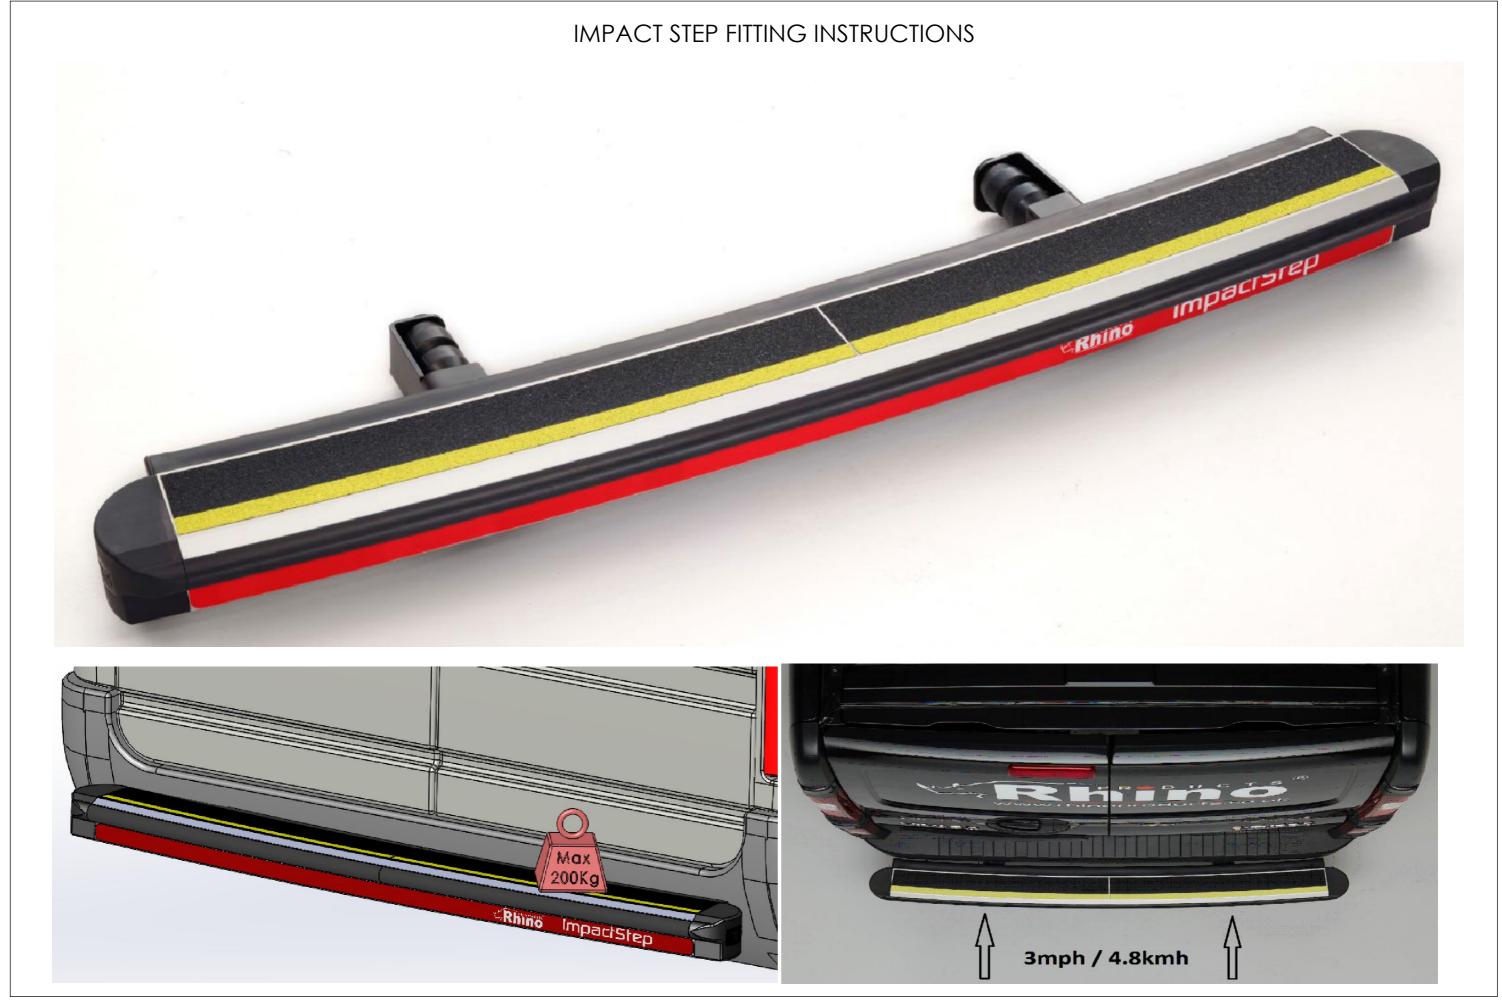


IMPACT STEP FITTING INSTRUCTIONS

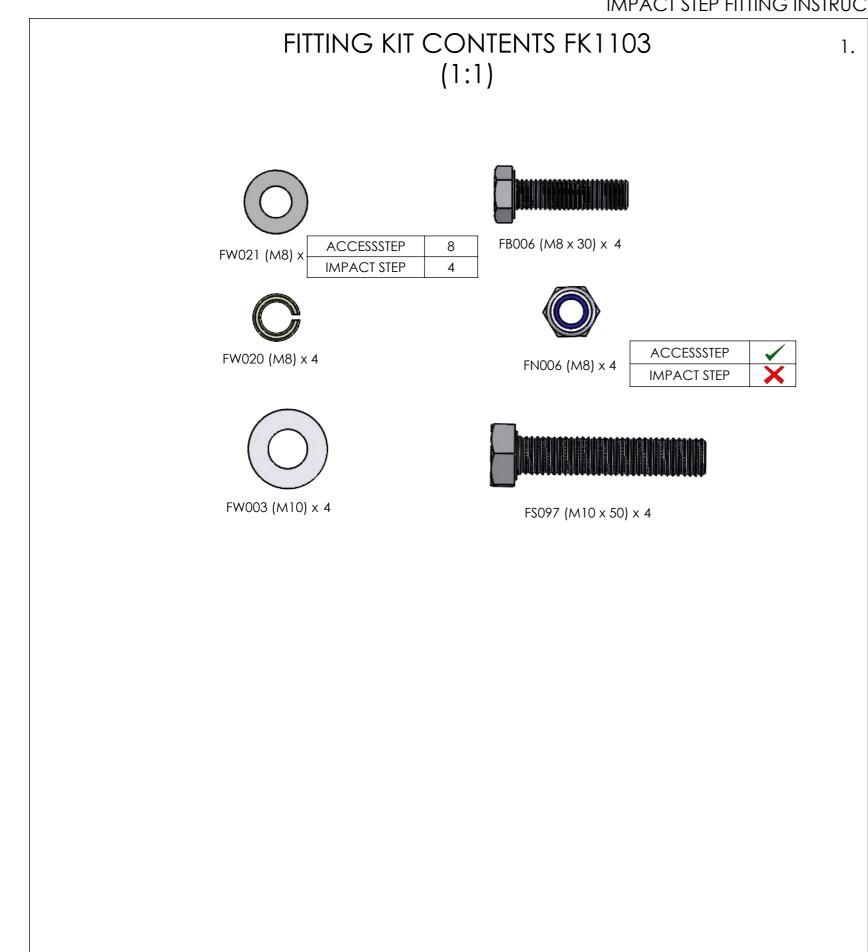

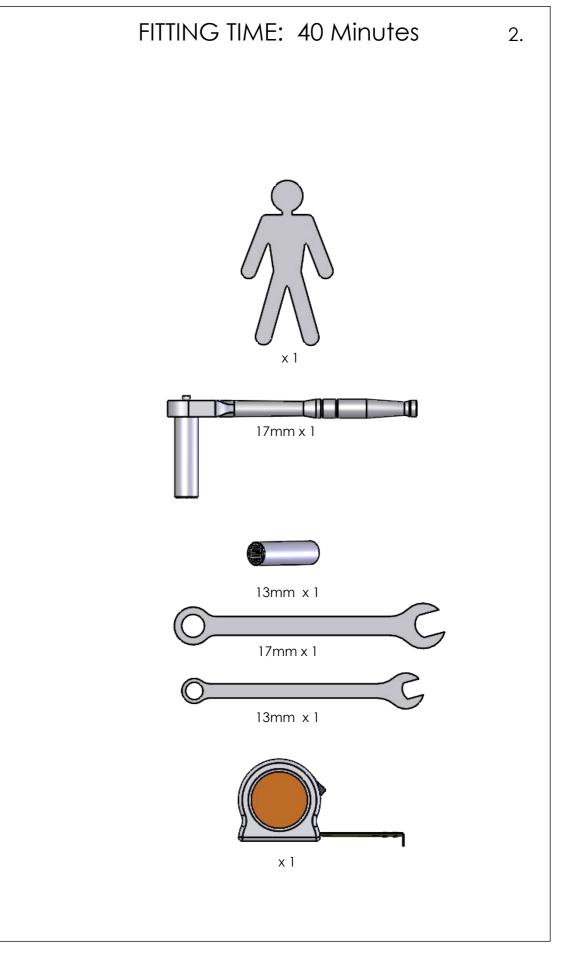

SSK039_a

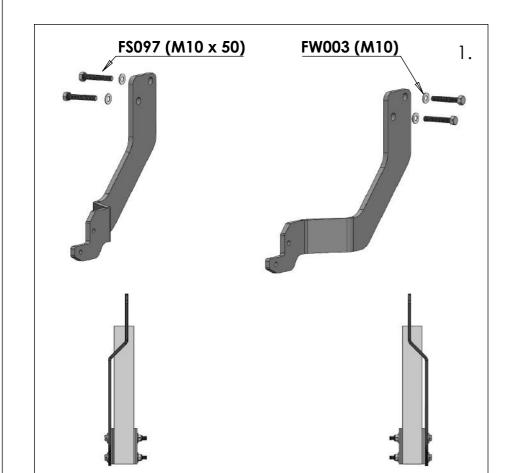

IMPACT STEP FITTING INSTRUCTIONS

