


# TA2PR/FL






# KammBar

## Instructions

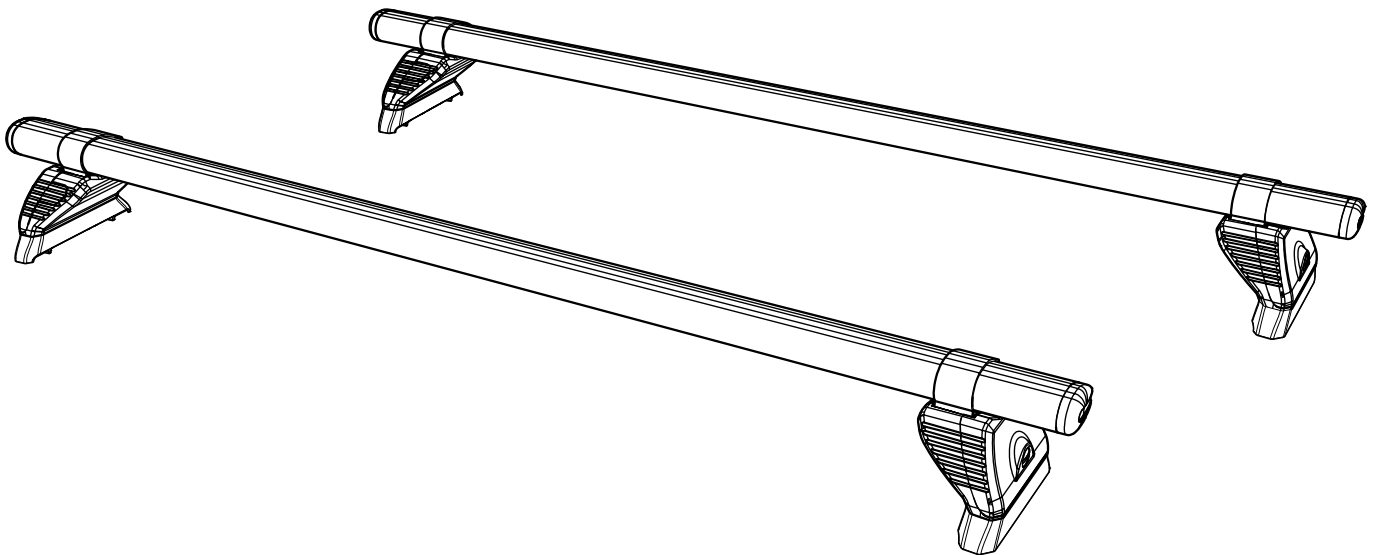


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

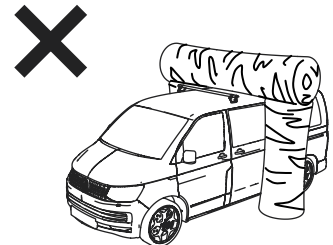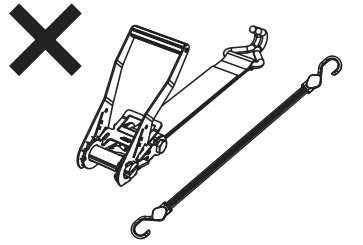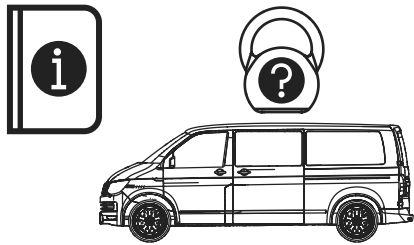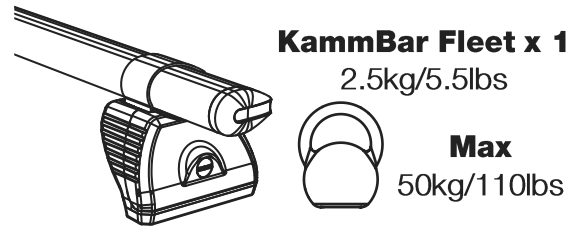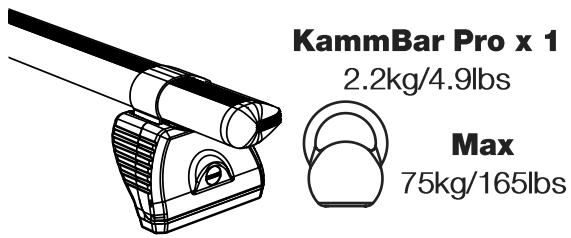


### KammBar Pro

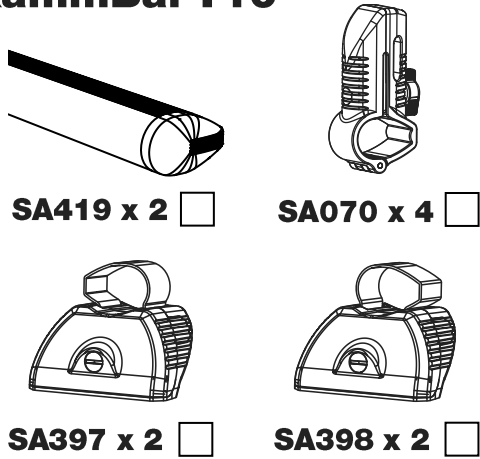

### KammBar Fleet

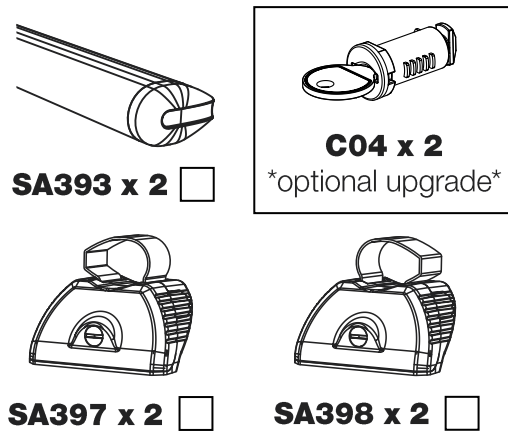

### Fitting Kit

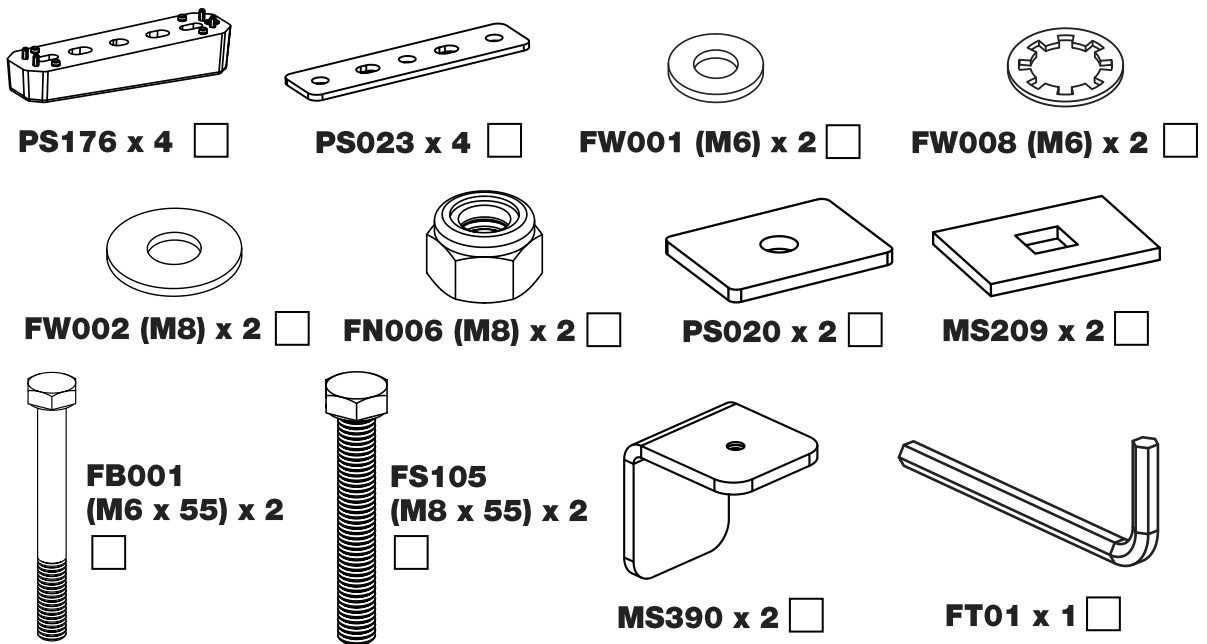


1.



2.



3.





SA397

PS176

SA398

PS176





SA397



PS176

SA398



PS176

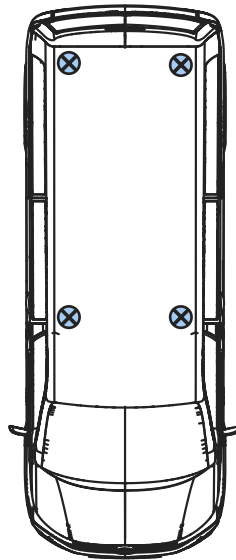


4.

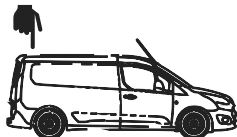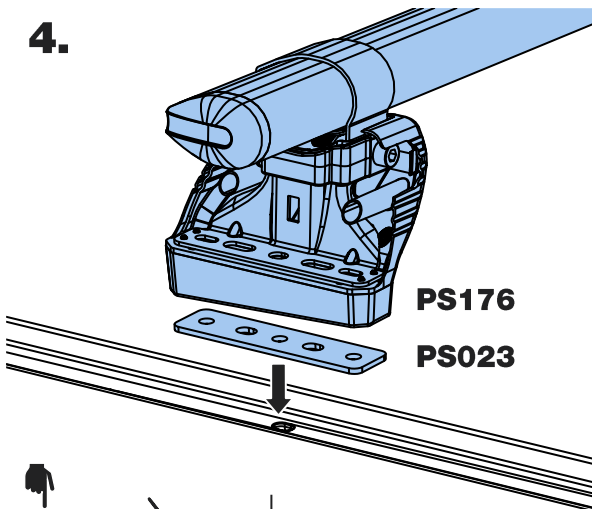


5.

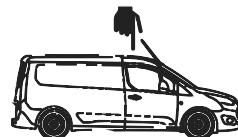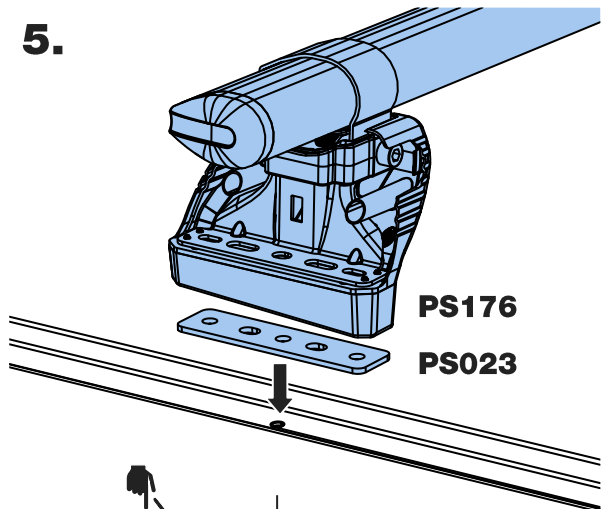


6.

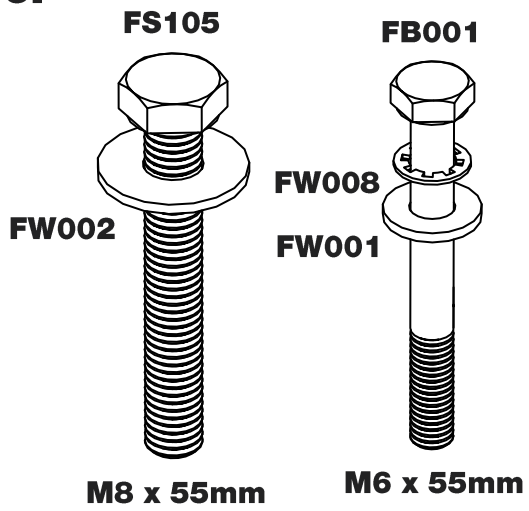


7.

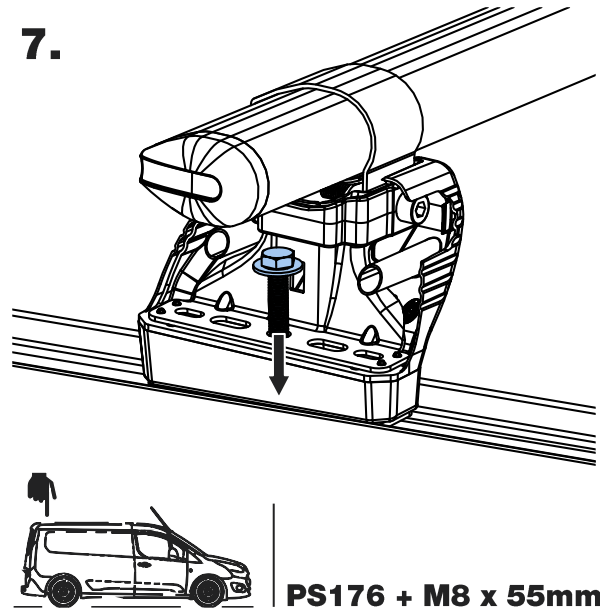


8.

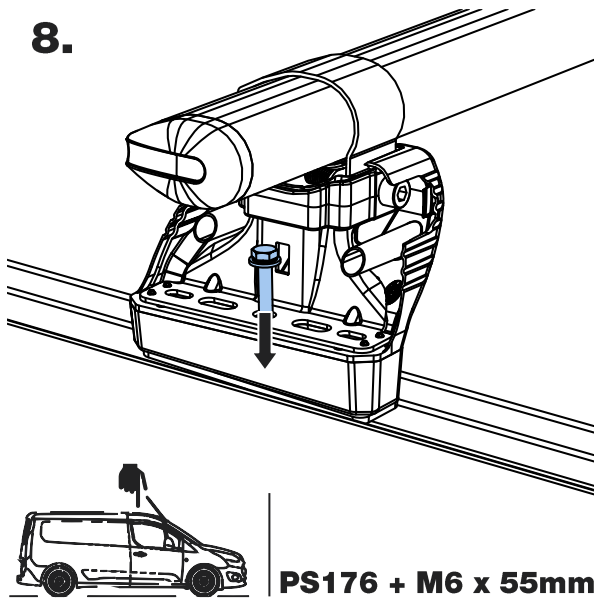


9.

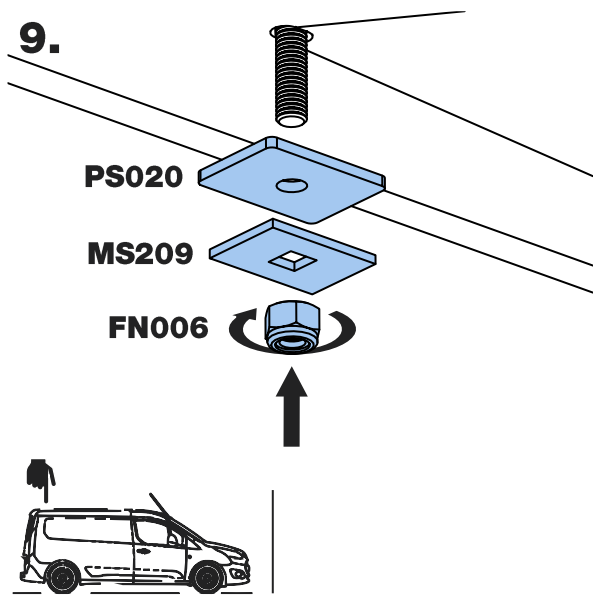


10.

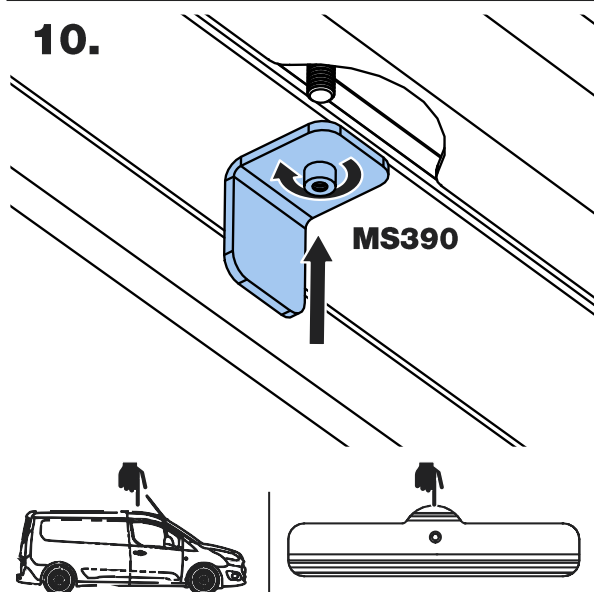


11.

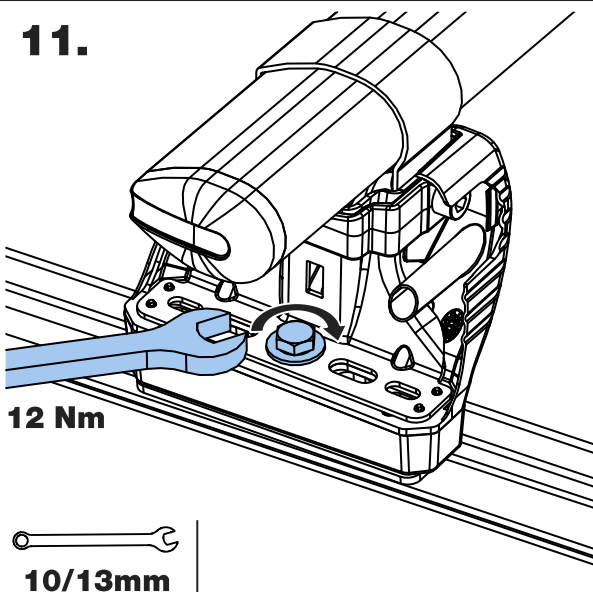


12.

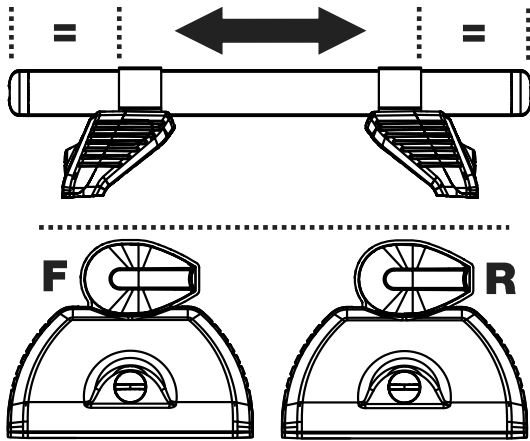

13.

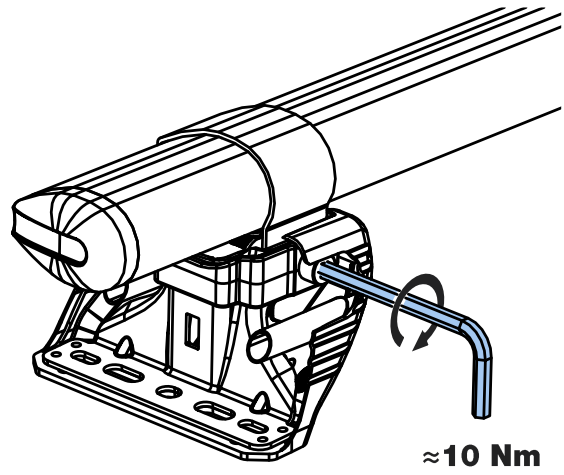

14.

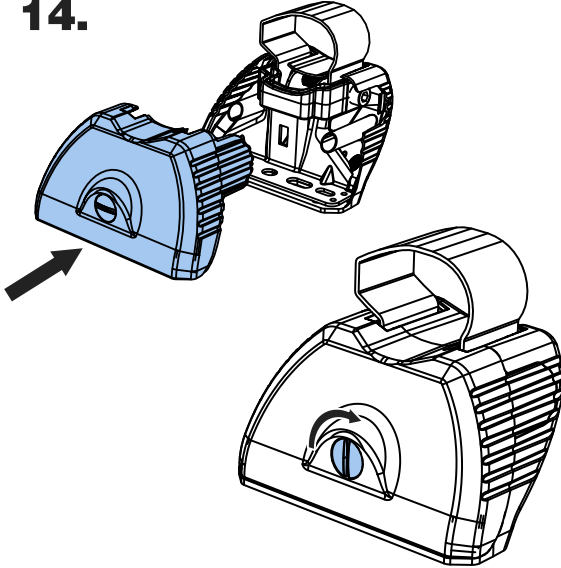

15.

