


TB2PR/FL






KammBar

Instructions


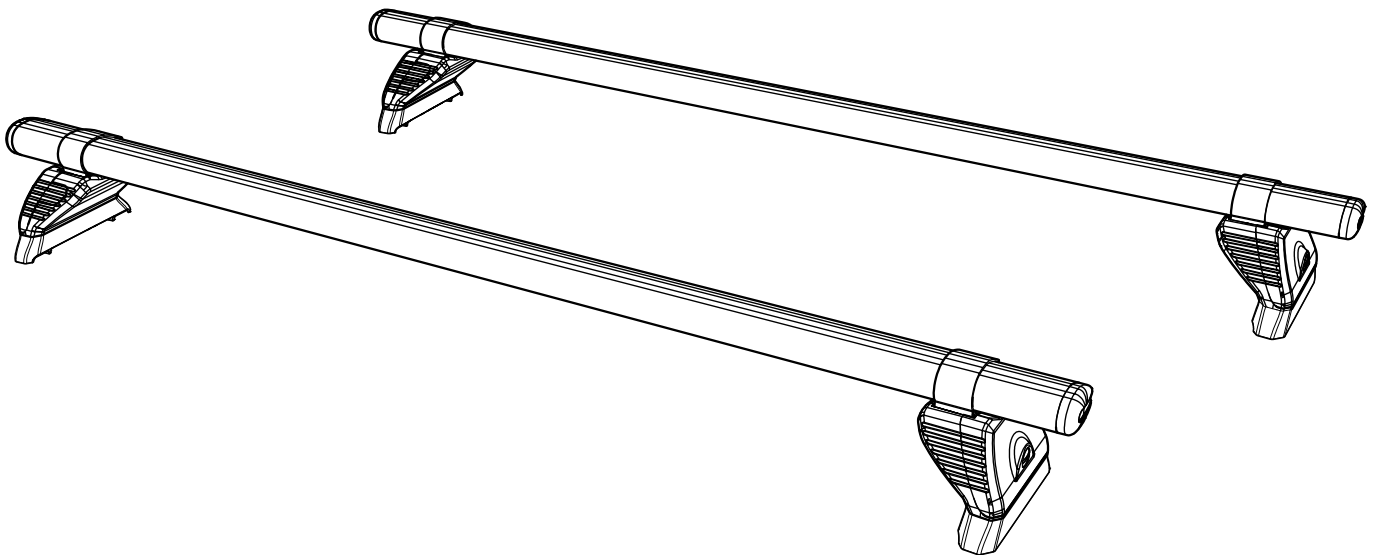


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

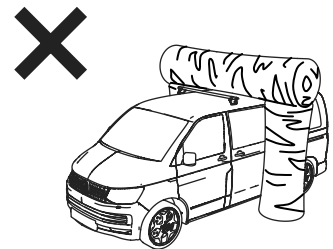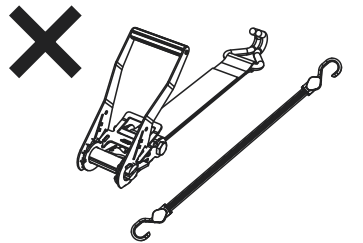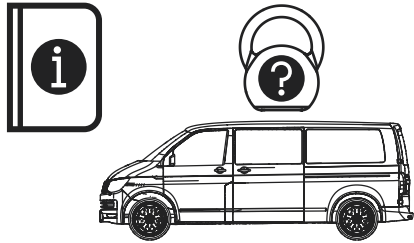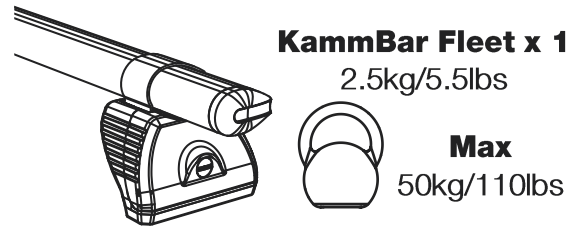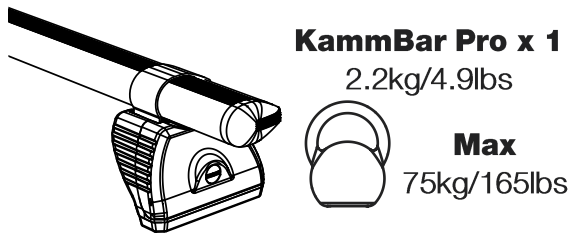


KammBar Pro

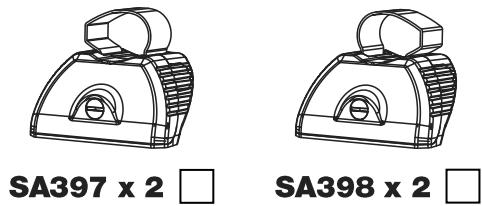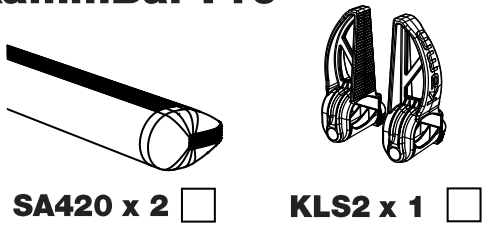


KammBar Fleet

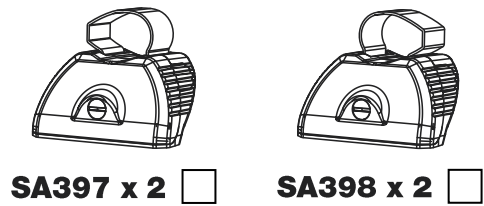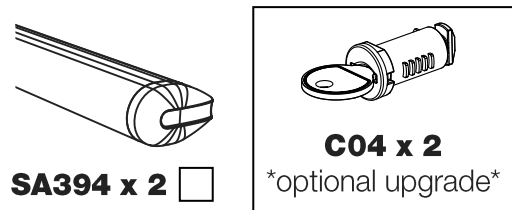


Fitting Kit

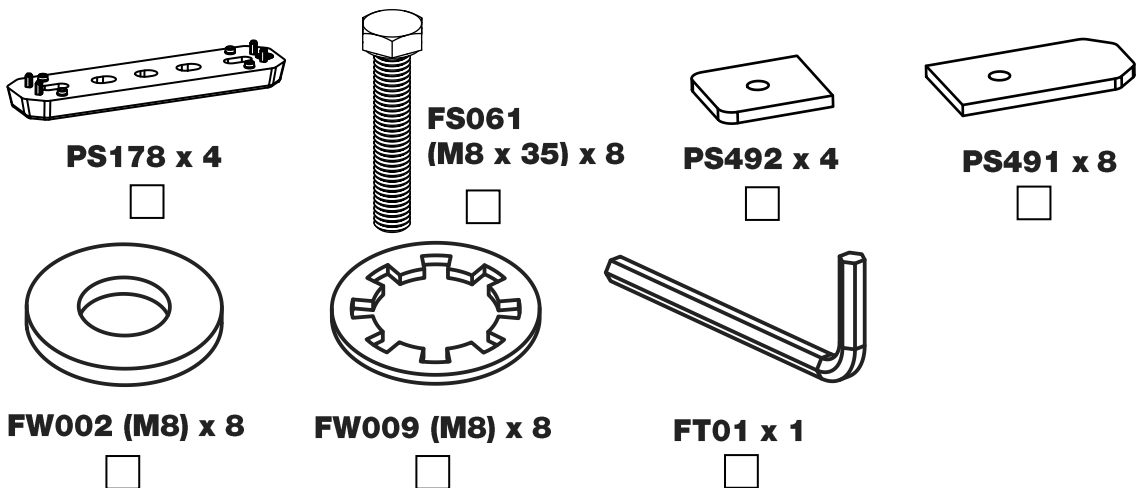


1.

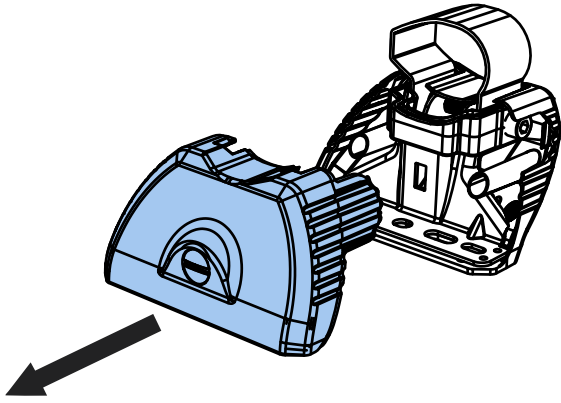

2.



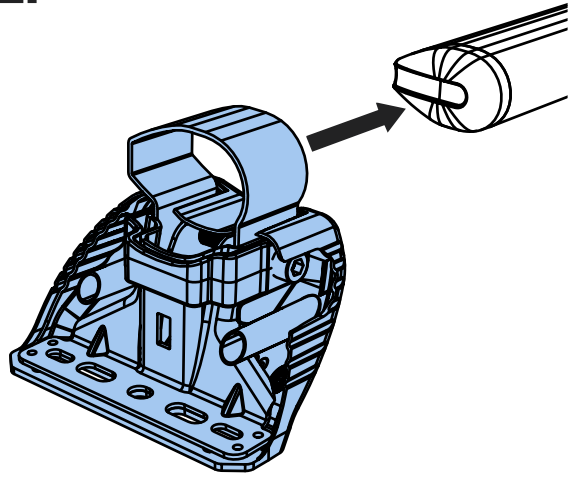


3.

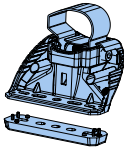


SA397
PS178

SA398
PS178

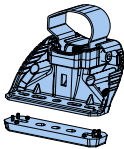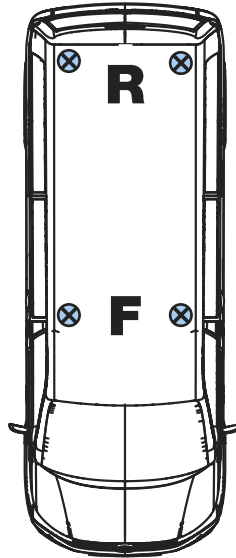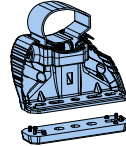


SA397
PS178


SA398
PS178

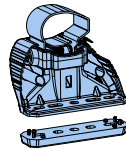

4a.

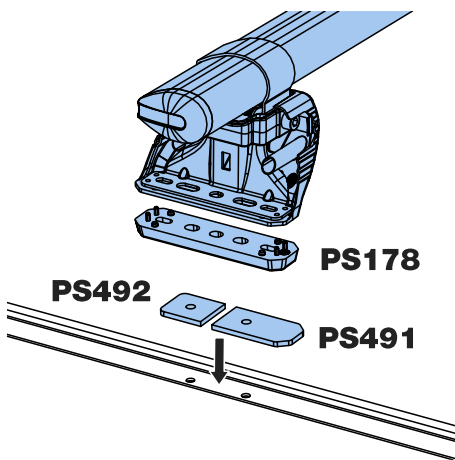

4b.

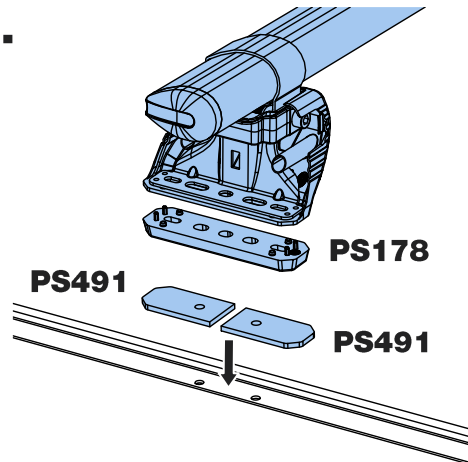


! FORD TRANSIT
CUSTOM 2012-2023

R

! FORD TRANSIT
CUSTOM 2023-


R

5a.

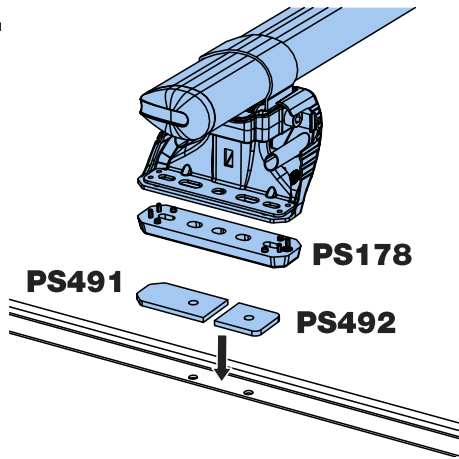


! FORD TRANSIT
CUSTOM 2012-2023 **F**

5b.

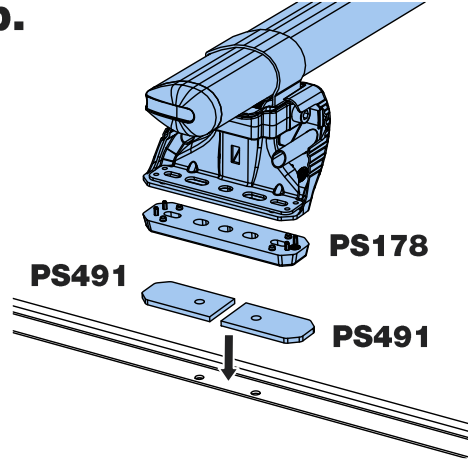


! FORD TRANSIT
CUSTOM 2023- **F**


6.

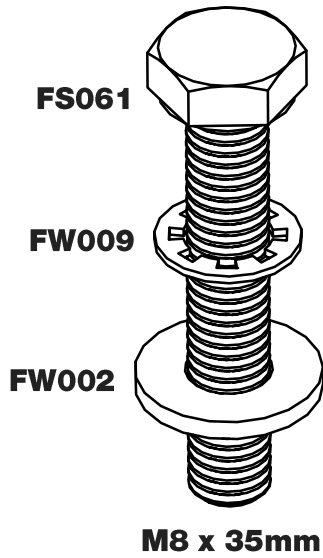


7.

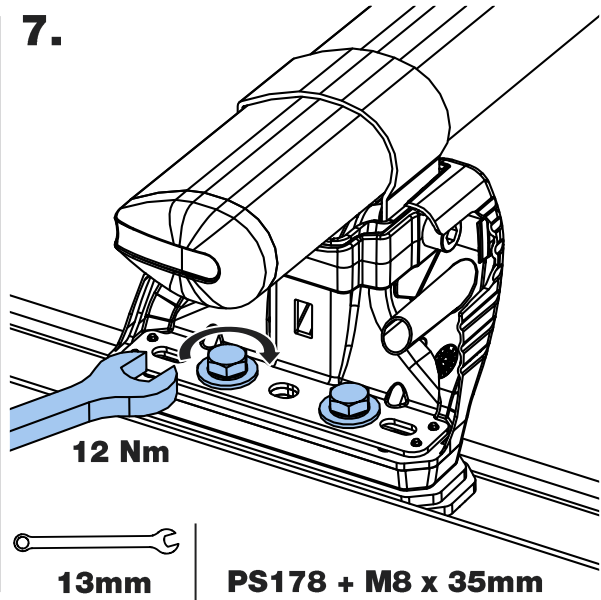


8.

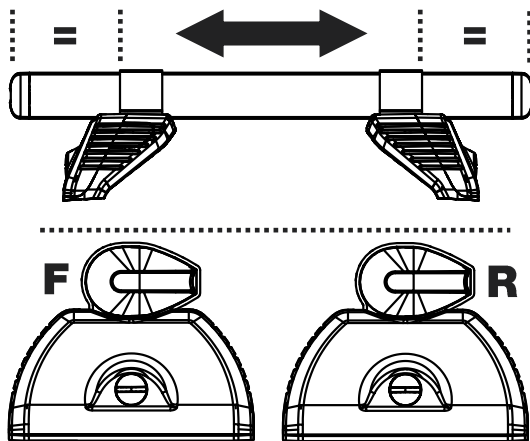

9.

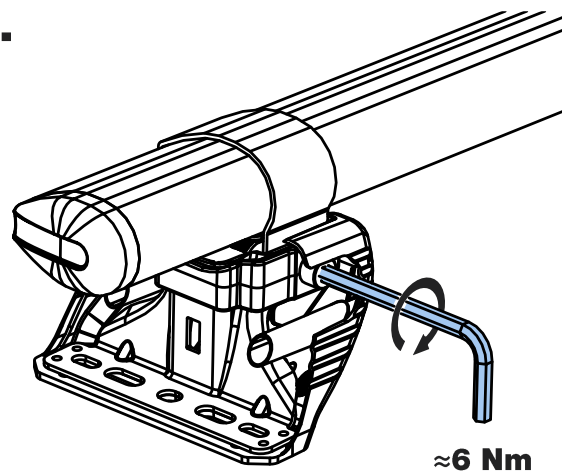

10.

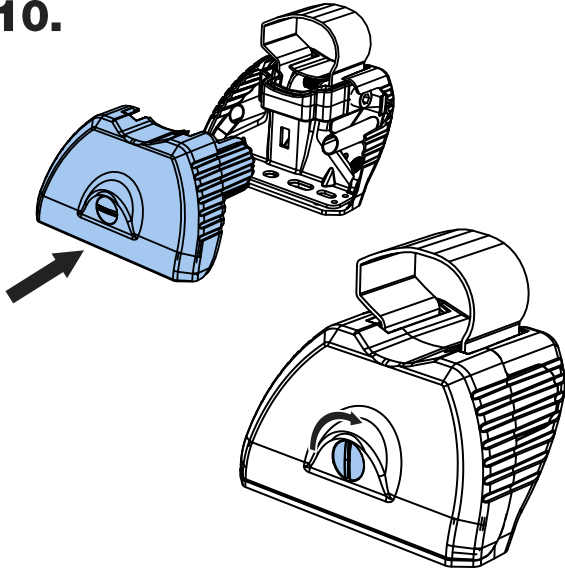

11.

