


# TD2PR/FL





# KammBar

## Instructions

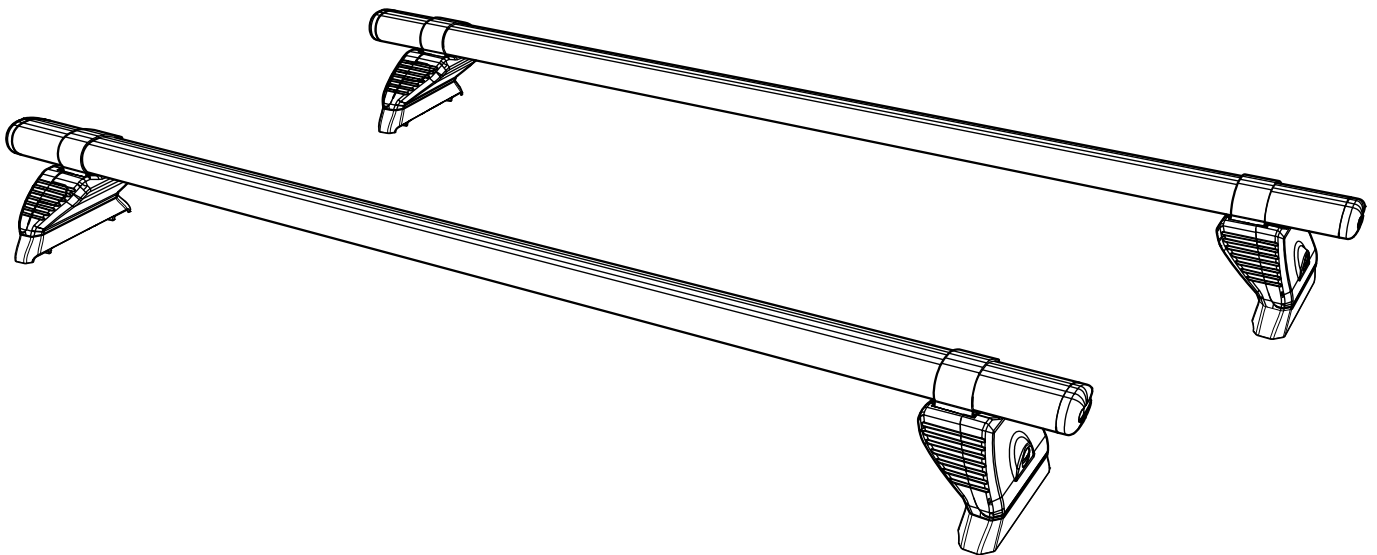


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

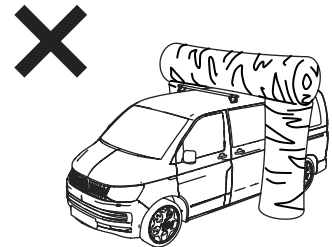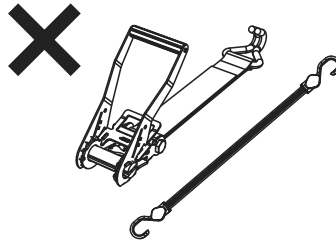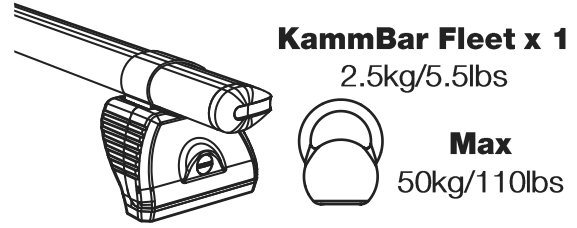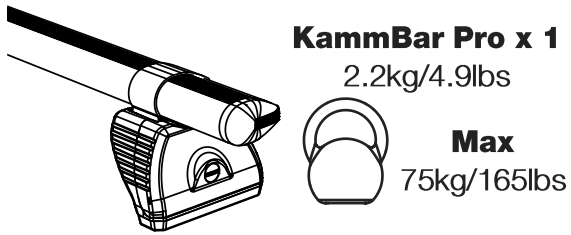


### KammBar Pro

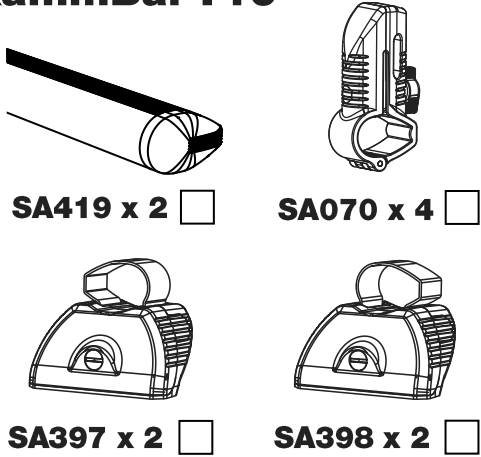

### KammBar Fleet

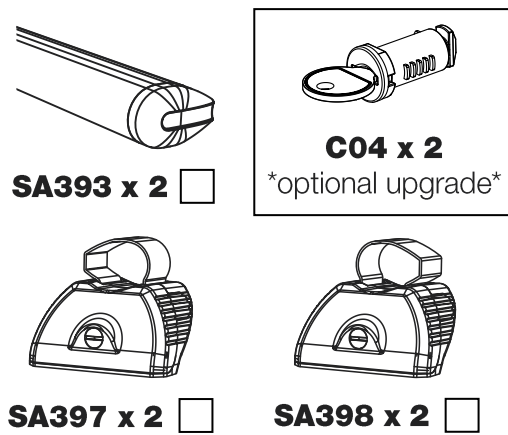


### Fitting Kit

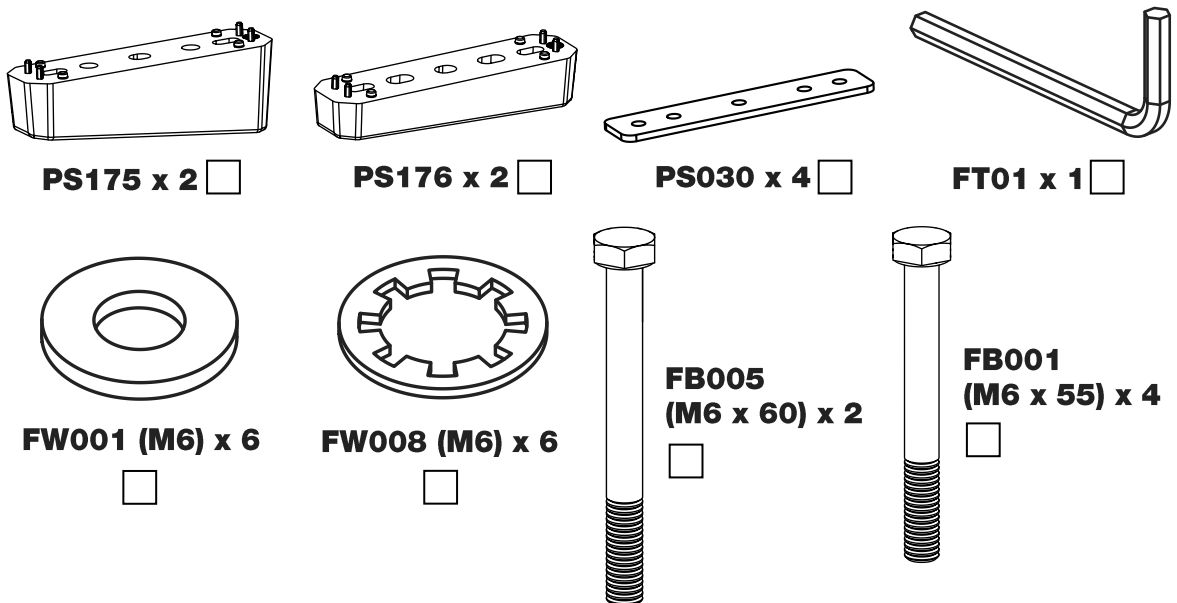


1.




2.

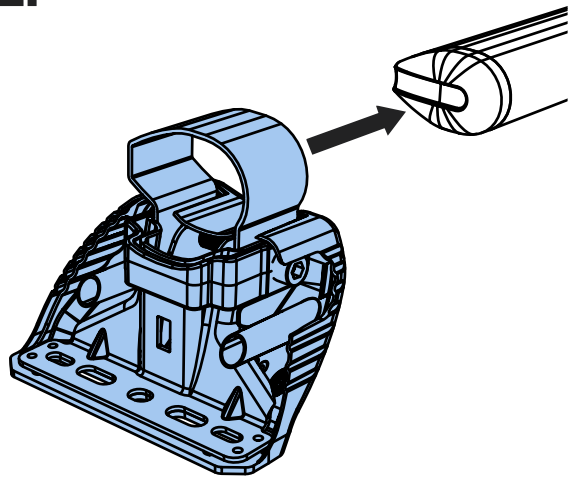



3.



SA397  
PS176

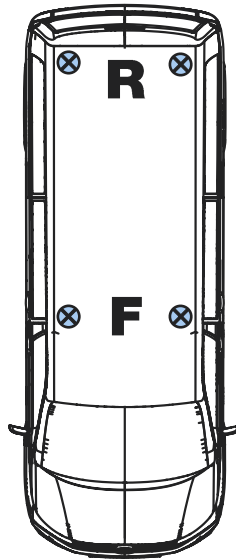


SA398  
PS176




SA397  
PS175


SA398  
PS175




4.

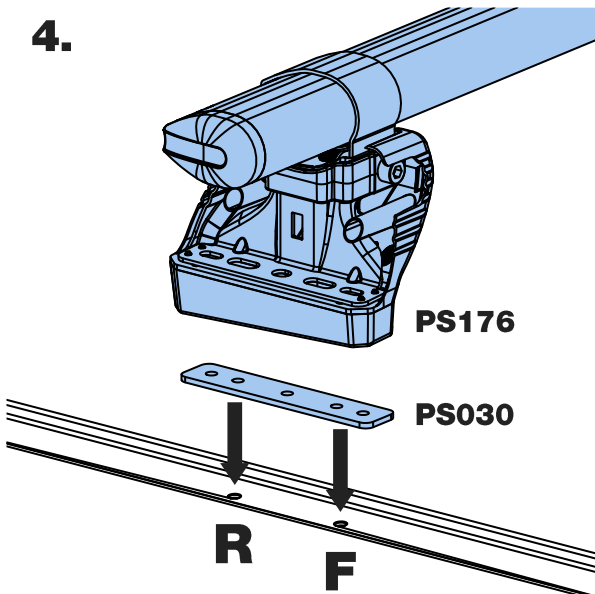


5.

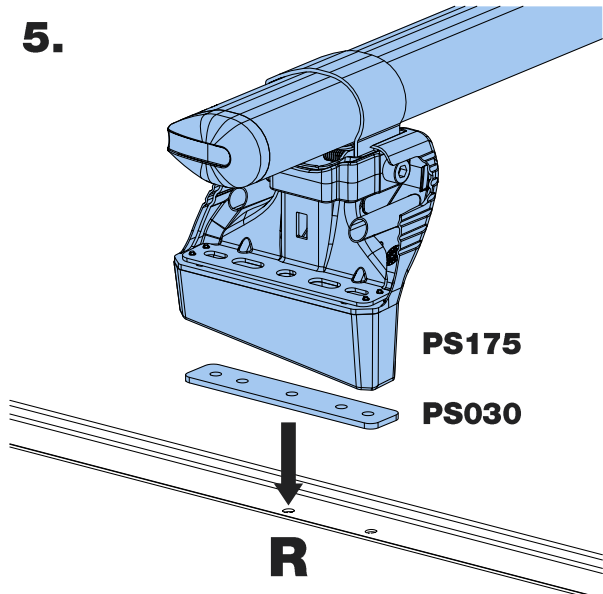


6.

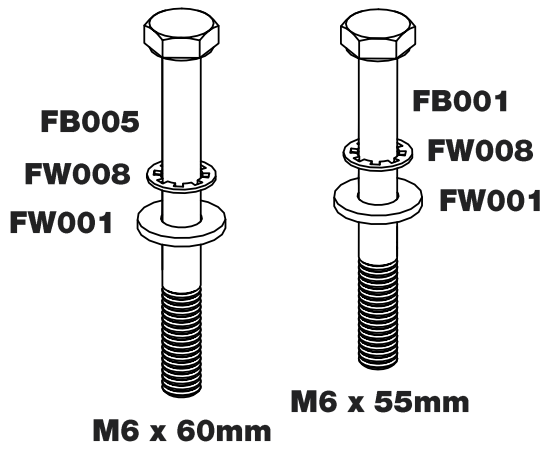


7.

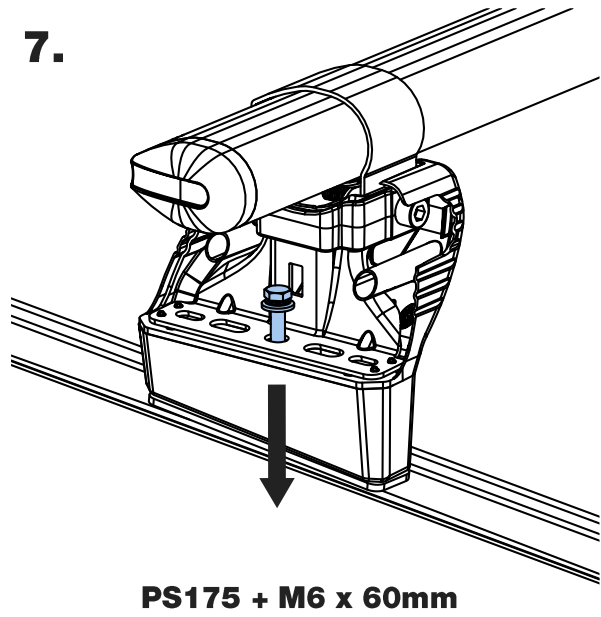


8.

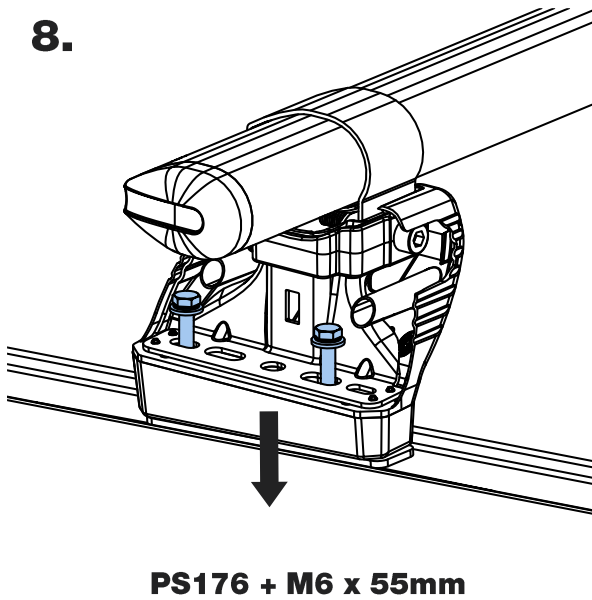


9.

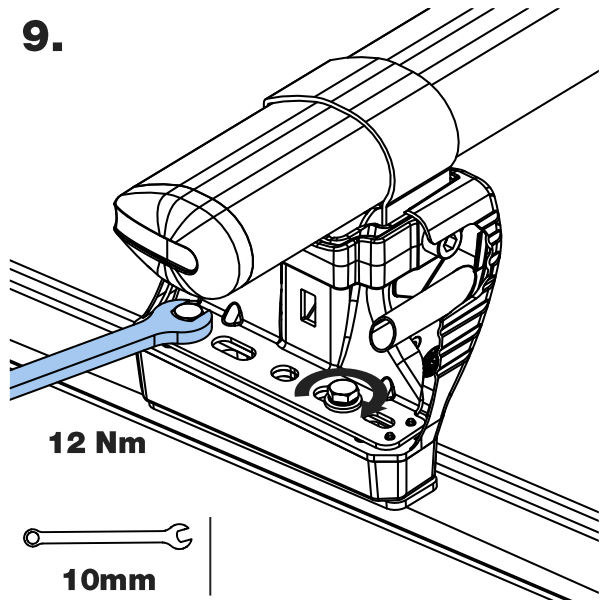


10.

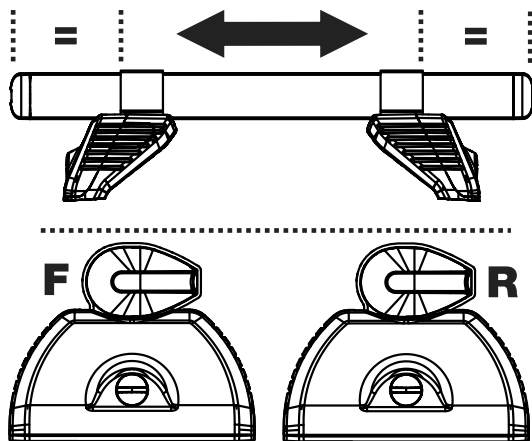

11.

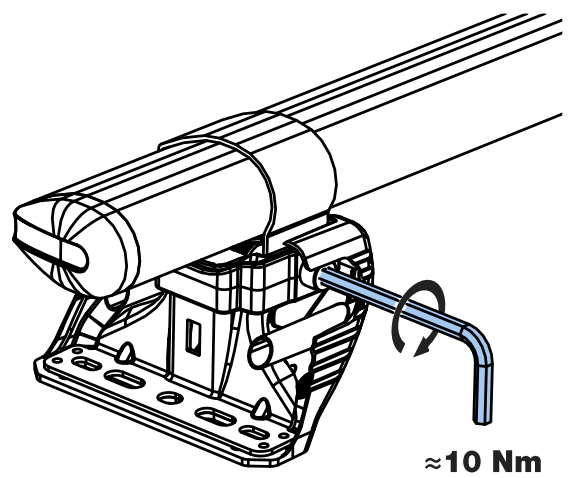

12.

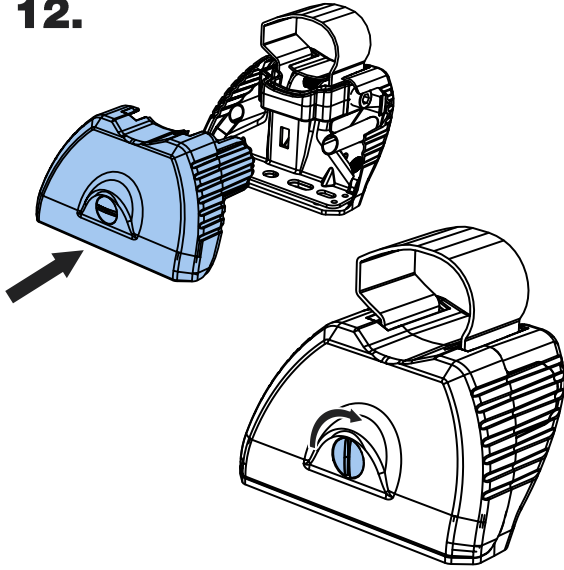

13.

