


# XC4PR/FL





# KammBar

## Instructions

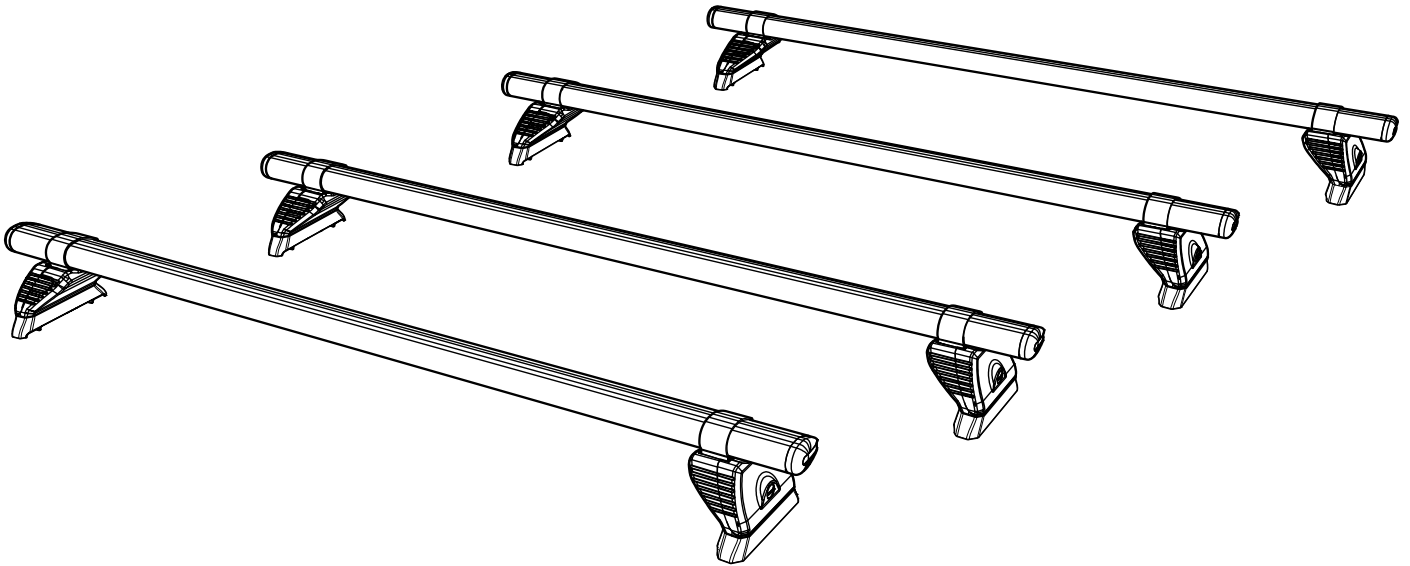


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

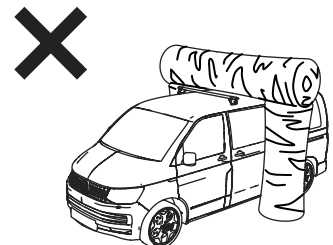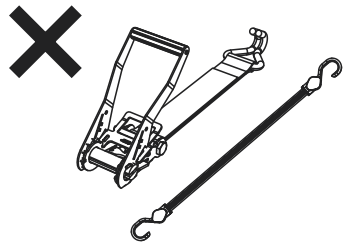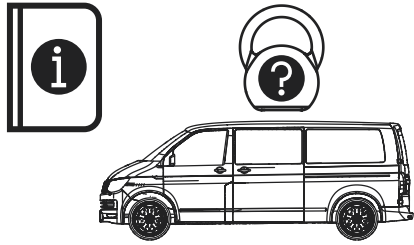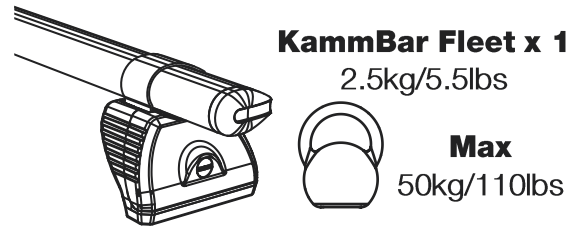


### KammBar Pro

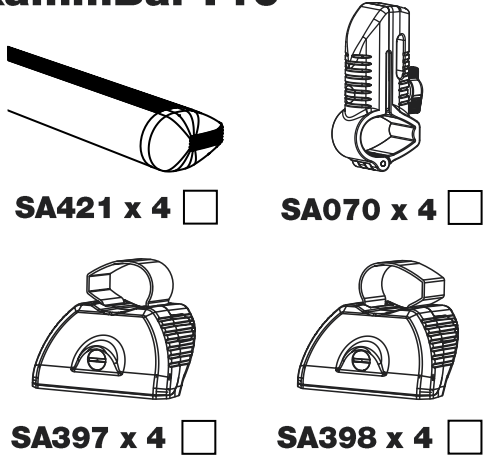


### KammBar Fleet

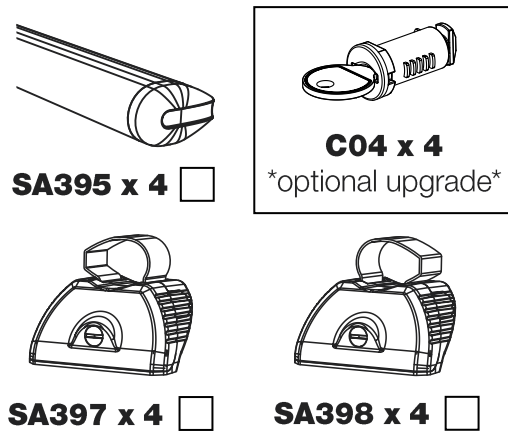






### Fitting Kit

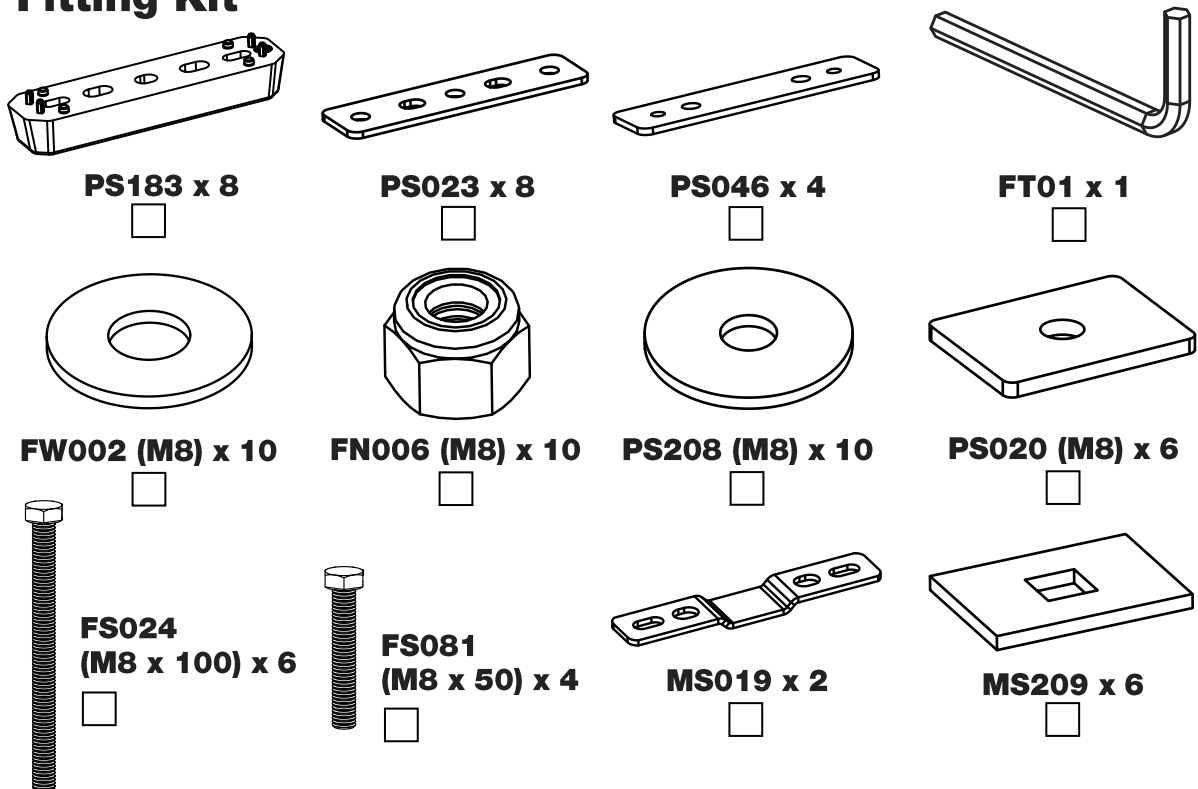


1.

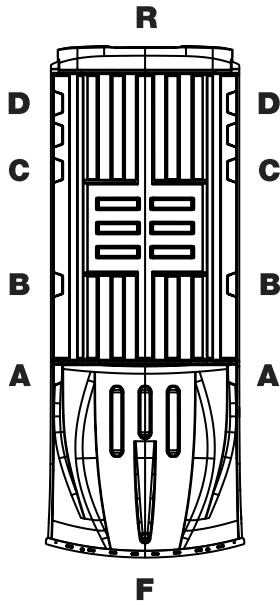


2.

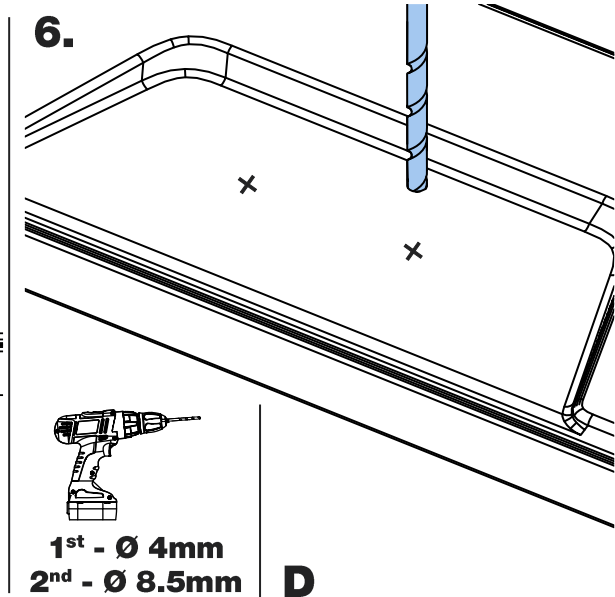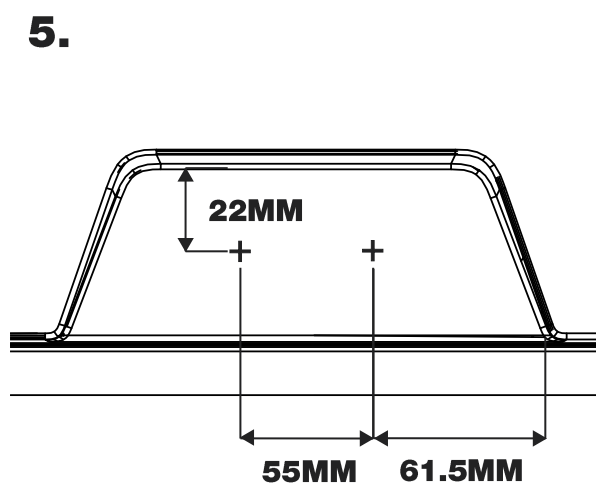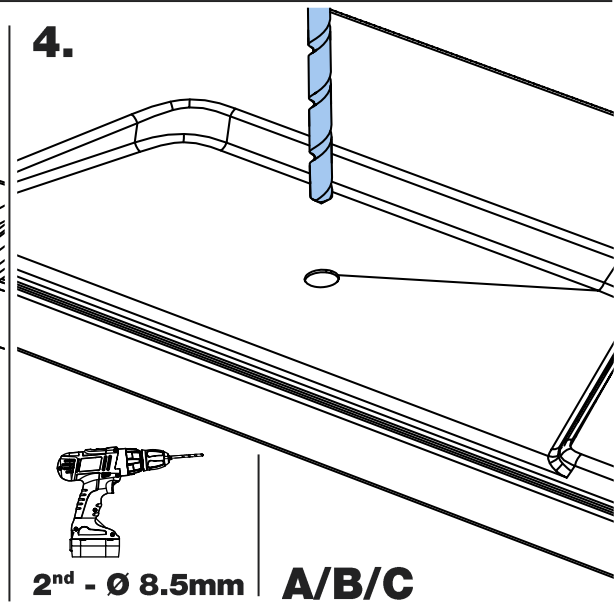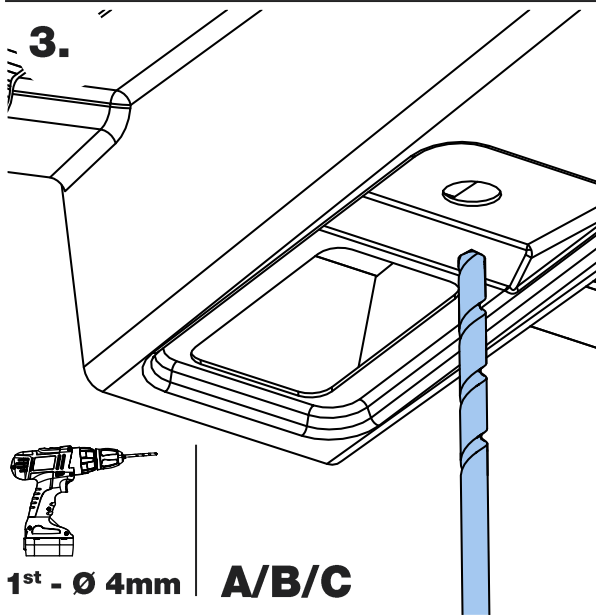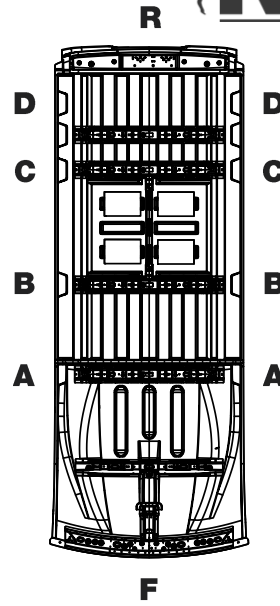


7.

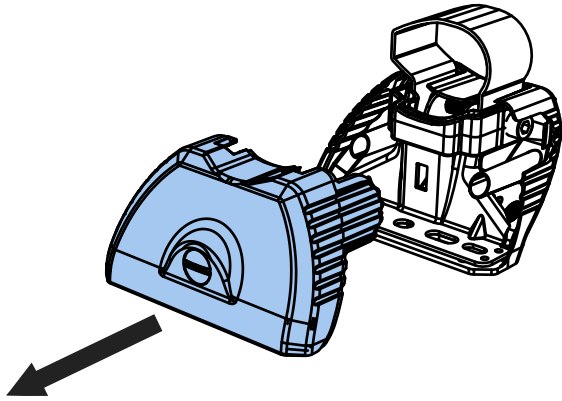

8.

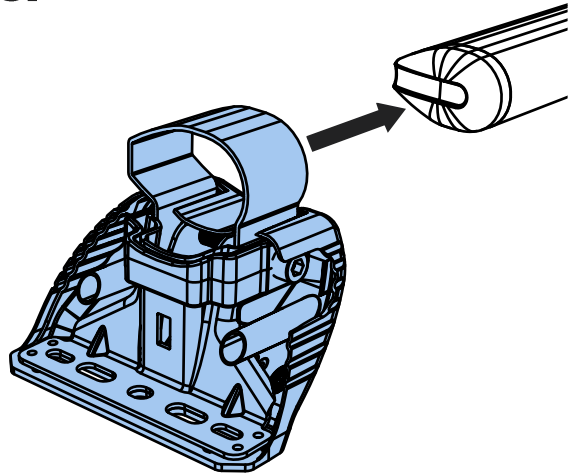


9.



SA397



PS183



SA397




PS183



SA397




PS183



SA397



PS183

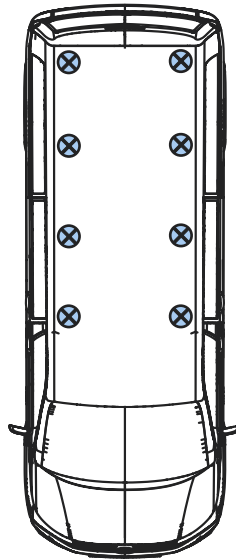


SA398



PS183




SA398



PS183




SA398



PS183



SA398




PS183

10.


FW002

PS208

FS024



M8 x 100mm




M8 x 50mm

FW002

PS208

FS081

11.

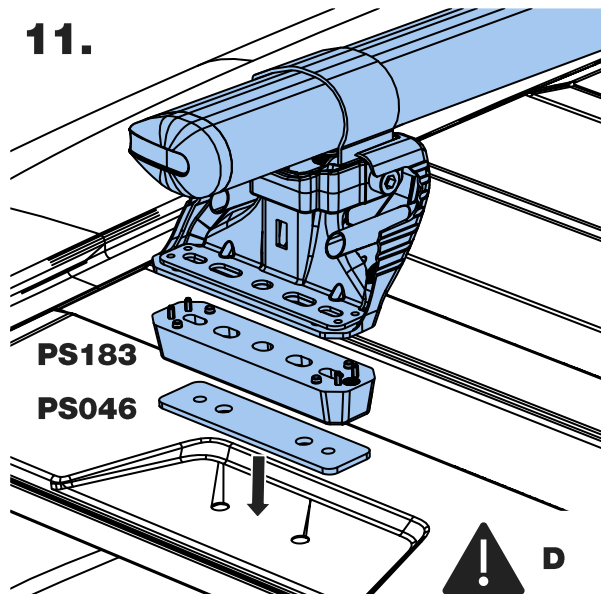

PS183

PS046

